

## Poseidon M60 Boom Remote Control

- 1 “”: **Power Button**  
Press to power on / standby.
- 2 “”: **SOURCE**  
Press to switch channel: eARC-OPT-BT-USB.
- 3 “”: **eARC**  
Press to switch to HDMI eARC channel.
- 4 “”: **OPT**  
Press to switch to OPTICAL channel.
- 5 “”: **BT**  
Press to switch to BLUETOOTH channel.
- 6 “”: **USB REPEAT**  
Press to switch between single loop playback and list loop palyback.
- 7 “”: **USB**  
Press to switch to USB channel.
- 8 “”: **EQ RESET**  
Press to restore EQ to default settings.

- 9 “”: **Xupmix**  
The default setting is "on," allowing for unified control over the activation and deactivation of 6 sound effect modes.  
Xupmix on: The surround channel sound will be provided by a rich multi-channel signal processed by the algorithm, offering a more immersive auditory experience.  
Xupmix off: The surround channel sound will be optimized based on the left and right channel signals using an algorithm, resulting in a broader sound field effect.

- 10 “+”: **Volume Up**
- 11 “-”: **Volume Down**
- 12 “<”: **Previous**  
For BT and USB mode only: Skip to previous track.

- 13 “>”: **Next**  
For BT and USB mode only: Skip to next track.

- 14 “”: **Play / Pause**  
For BT and USB mode only.

- 15 “”: **MUTE**

- 16 “”: **LED DIMMER**  
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.

- 17 “”: **BASSMX**  
Press to adjust bass level, the display will show: “B5-6”, “B5-5”, “B5-4”, “B5-3”, “B5-2”, “B5-1”, “B5 0”, “B5 1”, “B5 2”, “B5 3”, “B5 4”, “B5 5”, “B5 6”.

- 18 “”: **MIDRANGE**  
Press to adjust alto level, the display will show: “MR-6”, “MR-5”, “MR-4”, “MR-3”, “MR-2”, “MR-1”, “MR 0”, “MR 1”, “MR 2”, “MR 3”, “MR 4”, “MR 5”, “MR 6”.

- 19 “”: **TREBLE**  
Press to adjust treble level, the display will show: “TB-6”, “TB-5”, “TB-4”, “TB-3”, “TB-2”, “TB-1”, “TB 0”, “TB 1”, “TB 2”, “TB 3”, “TB 4”, “TB 5”, “TB 6”.

- 20 “”: **MOVIE**  
Press to switch to MOVIE mode, the display will show: “MOVI”.

- 21 “”: **MUSIC**  
Press to switch to MUSIC mode, the display will show: “MUSC”.

- 22 “”: **VOICE**  
Press to switch to VOICE mode, the display will show: “VOIC”.

- 23 “”: **SPORT**  
Press to switch to SPORT mode, the display will show: “SPRT”.

- 24 “”: **GAME**  
Press to switch to GAME mode, the display will show: “GAME”.

- 25 “”: **NIGHT**  
Press to switch to NIGHT mode, the display will show: “NIGT”.

- 26 “”: **SURROUND**  
Press to adjust surround sound level, the display will show: “SR-6”, “SR-5”, “SR-4”, “SR-3”, “SR-2”, “SR-1”, “SR 0”, “SR 1”, “SR 2”, “SR 3”, “SR 4”, “SR 5”, “SR 6”.

- 27 “”: **PROMPT TONE**  
Press to adjust prompt tone level, the display will show: “PT 0”, “PT 1”, “PT 2”, “PT 3”.  
Prompt Tone: including bluetooth connection tone, soundbar power on/off tone.  
PT 0 = NONE: Turns off all prompt tones.

