

## Remote Control

- 1 **"⏻": Power Button**  
Press to power on / standby.
- 2 **"📺": HDMI IN**  
Press to switch to HDMI IN channel.
- 3 **"📶": eARC**  
Press to switch to HDMI eARC channel.
- 4 **"📺": OPT**  
Press to switch to OPTICAL channel.
- 5 **"🎧": AUX**  
Press to switch to AUX channel.
- 6 **"📶": BT**  
Press to switch to BLUETOOTH channel.
- 7 **"📶": USB**  
Press to switch to USB channel.
- 8 **"🔧": SUB PAIR**  
Re-pair the subwoofer: Hold the 'SUB PAIR' button for 3s and press the subwoofer 'ON/Standby' button for 5s.
- 9 **"⌘": Xupmix**  
The default setting is "on," allowing for unified control over the activation and deactivation of 6 sound effect modes.  
Xupmix on: The surround channel sound will be provided by a rich multi-channel signal processed by the algorithm, offering a more immersive auditory experience.  
Xupmix off: The surround channel sound will be optimized based on the left and right channel signals using an algorithm, resulting in a broader sound field effect.
- 10 **"+" : Volume Up**
- 11 **"-" : Volume Down**
- 12 **"<" : Previous**  
For BT and USB mode only: Skip to previous track.
- 13 **">" : Next**  
For BT and USB mode only: Skip to next track.
- 14 **"⏸": Play / Pause**  
For BT and USB mode only.
- 15 **"🔇": MUTE**
- 16 **"💡": LED DIMMER**  
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.
- 17 **"BASS MX": BASSMX**  
Press to adjust bass level, the display will show: "B5-6", "B5-5", "B5-4", "B5-3", "B5-2", "B5-1", "B5 0", "B5 1", "B5 2", "B5 3", "B5 4", "B5 5", "B5 6".
- 18 **"MIDRANGE": MIDRANGE**  
Press to adjust alto level, the display will show: "MR-6", "MR-5", "MR-4", "MR-3", "MR-2", "MR-1", "MR 0", "MR 1", "MR 2", "MR 3", "MR 4", "MR 5", "MR 6".
- 19 **"TREBLE": TREBLE**  
Press to adjust treble level, the display will show: "TJ-6", "TJ-5", "TJ-4", "TJ-3", "TJ-2", "TJ-1", "TJ 0", "TJ 1", "TJ 2", "TJ 3", "TJ 4", "TJ 5", "TJ 6".
- 20 **"🎬": MOVIE**  
Press to switch to MOVIE mode, the display will show: "MOVI".
- 21 **"🎵": MUSIC**  
Press to switch to MUSIC mode, the display will show: "MUSC".
- 22 **"🔊": VOICE**  
Press to switch to VOICE mode, the display will show: "VOIC".
- 23 **"🏃": SPORT**  
Press to switch to SPORT mode, the display will show: "SPRT".
- 24 **"🎮": GAME**  
Press to switch to GAME mode, the display will show: "GAME".
- 25 **"🌙": NIGHT**  
Press to switch to NIGHT mode, the display will show: "NIGT".
- 26 **"SURROUND": SURROUND**  
Press to adjust surround sound level, the display will show: "SR-6", "SR-5", "SR-4", "SR-3", "SR-2", "SR-1", "SR 0", "SR 1", "SR 2", "SR 3", "SR 4", "SR 5", "SR 6".
- 27 **"PROMPT TONE": PROMPT TONE:**  
Press to adjust the prompt tone volume.

