

 
 
 
ULTIMEA go



 
Party Speaker

QUICK START GUIDE

Product list

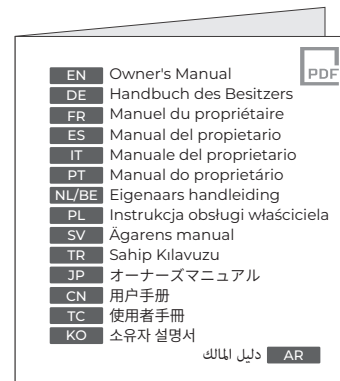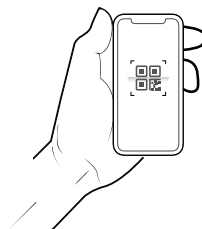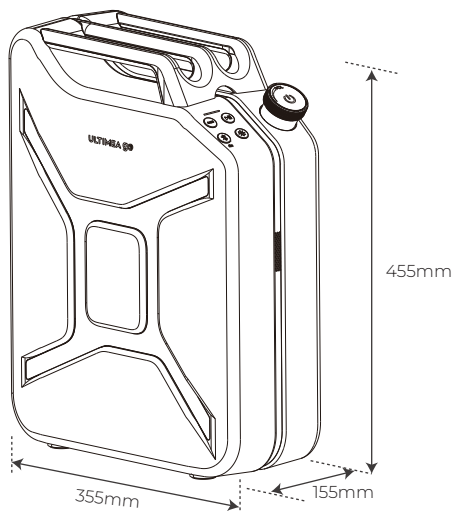



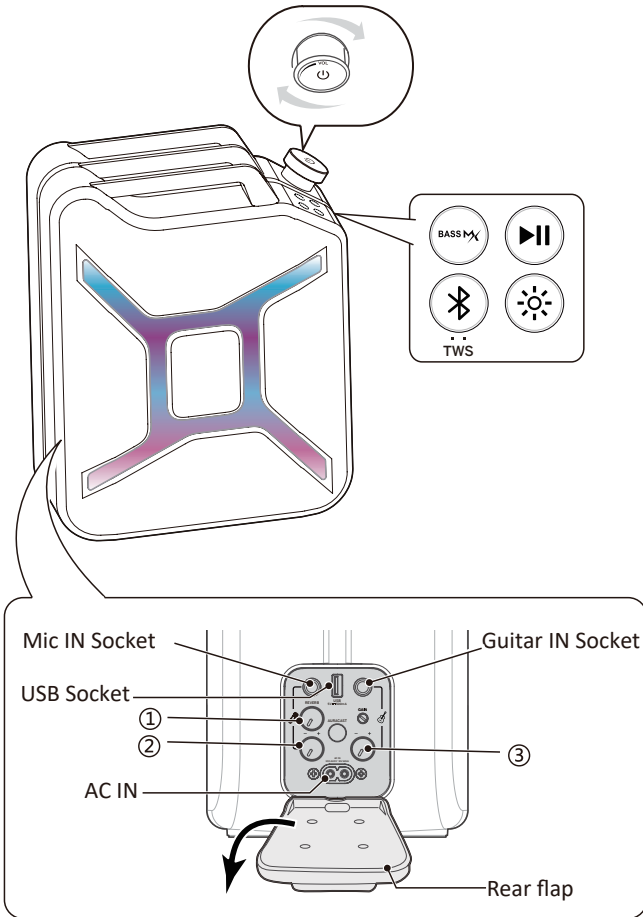



 

 









 






















 
 
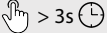


 
 
 






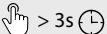


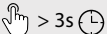






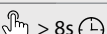


Identifying the Parts

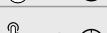

Function Description of Buttons

		Function
	Hand icon > 3s	Power On / Off
	Hand icon	Volume Down / Up
 TWS	Hand icon x1	Bluetooth Mode
	Hand icon x2	TWS Mode (On/Off)
	Hand icon > 3s	Bluetooth Disconnect
	Hand icon x1	Play / Pause
	Hand icon x2	Next Track
	Hand icon x3	Previous Track
	Hand icon x1	Bass boost to max
	Hand icon > 8s	Factory Reset (Plugged in)
	Hand icon x1	Switch Lighting Effects
	Hand icon > 3s	Turn Off Lighting
AURACAST 	Hand icon > 3s	Broadcast Mode
 ①	Hand icon	Reverb Intensity Adjustment
 ②	Hand icon	Microphone Input Volume
 ③	Hand icon	Guitar Input Volume
GAIN 	Hand icon	Guitar Input Gain

		DE	FR	ES	IT
		Funktion	Fonction	Función	Funzione
	 > 3s 	Ein-/Ausschalten	Marche/Arrêt	Encendido/Apagado	Accensione/Spengimento
		Lautstärke Leiser/Lauter	Volume - / +	Volumen abajo/arriba	Volume giù/su
 TWS	 x1	Bluetooth-Modus	Mode Bluetooth	Modo Bluetooth	Modalità Bluetooth
	 x2	TWS-Modus (Ein/Aus)	Mode TWS (On/Off)	Modo TWS (Encendido/Apagado)	Modalità TWS (On/Off)
	 > 3s 	Bluetooth Trennen	Déconnexion Bluetooth	Desconexión Bluetooth	Disconnessione Bluetooth
	 x1	Wiedergabe / Pause	Lecture / Pause	Reproducir/Pausa	Riproduci/Pausa
	 x2	Nächster Titel	Piste suivante	Pista siguiente	Traccia successiva
	 x3	Vorheriger Titel	Piste précédente	Pista anterior	Traccia precedente
	 x1	Bass auf Max	Basses au max	Bajos al máximo	Bassi al massimo
	 > 8s 	Werkseinstellung (Eingesteckt)	Réinitialisation d'usine (Branché)	Restablecimiento de fábrica (Conectado)	Ripristino delle impostazioni (Collegato)
	 x1	Beleuchtungseffekte wechseln	Changer les effets d'éclairage	Cambiar efectos de iluminación	Cambia effetti di illuminazione
	 > 3s 	Beleuchtung ausschalten	Éteindre l'éclairage	Apagar iluminación	Spegni illuminazione
AURACAST 	 > 3s 	Übertragungsmodus	Mode diffusion	Modo de transmisión	Modalità trasmissione
 ¹	 	Hallintensität einstellen	Réglage de l'intensité de réverbération	Ajuste de intensidad de reverberación	Regolazione intensità riverbero
 ²	 	Mikrofonlautstärke regeln	Volume entrée micro	Volumen de entrada de micrófono	Volume ingresso microfono
 ³	 	Gitarreingangslautstärke	Volume entrée guitare	Volumen de entrada de guitarra	Volume ingresso chitarra
GAIN 	 	Gitarreingangsverstärkung	Gain d'entrée guitare	Ganancia de entrada de guitarra	Guadagno ingresso chitarra















 
 






 
 












		PT	NL	PL
		Função	Functie	Funkcja
	 > 3s 	Ligar/Desligar	Aan/Uit	Włącz/Wyłącz
		Volume - / +	Volume lager/hoger	Głośność - / +
 TWS	 x1	Modo Bluetooth	Bluetooth-modus	Tryb Bluetooth
	 x2	Modo TWS (On/Off)	TWS-modus (Aan/Uit)	Tryb TWS (Włącz/Wyłącz)
	 > 3s 	Desconexão Bluetooth	Bluetooth verbreken	Rozłączenie Bluetooth
	 x1	Reproduzir/Pausar	Afspelen/Pauze	Odtwarzanie/Pauza
	 x2	Faixa seguinte	Volgend nummer	Następny utwór
	 x3	Faixa anterior	Vorig nummer	Poprzedni utwór
	 x1	Graves no máximo	Bas op max	Bas na maksa
	 > 8s 	Restauração de fábrica (Conectado)	Fabrieksinstelling (Aangesloten)	Reset fabryczny (Podłączony)
	 x1	Alternar efeitos de iluminação	Verlichtingseffecten wisselen	Zmień efekty oświetlenia
	 > 3s 	Desligar iluminação	Verlichting uit	Wyłącz oświetlenie
	 > 3s 	Modo de transmissão	Uitzendmodus	Tryb transmisji
 ①		Ajuste de intensidade de reverberação	Nagalinstelling nagalmessing	Regulacja intensywności pogłosu
 ②		Volume de entrada do microfone	Microfoonvolume	Głośność wejścia mikrofonu
 ③		Volume de entrada de guitarra	Gitaarvolume	Głośność wejścia gitary
		Ganho de entrada de guitarra	Gitaar ingang gain	Wzmocnienie wejścia gitary



SV


TR

JA

		Funktion	Fonksiyon	機能
	 > 3s 	På/Av	Açma/Kapama	電源オン/オフ
		Volym ner/upp	Sesi Azalt/Yükselt	音量ダウン/アップ
	 x1	Bluetooth-läge	Bluetooth Modu	Bluetooth モード
	 x2	TWS-läge (På/Av)	TWS Modu (Açık/Kapalı)	TWS モード (オン/オフ)
	 > 3s 	Koppla bort Bluetooth	Bluetooth Bağlantısını Kes	Bluetooth 切断
	 x1	Spela/Paus	Oynat/Duraklat	再生/一時停止
	 x2	Nästa spår	Sonraki Parça	次のトラック
	 x3	Föregående spår	Önceki Parça	前のトラック
	 x1	Bas på max	Bas son seviyede	低音を最大に
	 > 8s 	Återställ fabriksinställningar (Ansluten)	Fabrika Ayarlarına Dön (Takılı)	工場出荷時リセット (接続中)
	 x1	Växla belysningseffekter	Aydınlatma Efektlerini Değiştir	照明効果切り替え
	 > 3s 	Stäng av belysning	Aydınlatmayı Kapat	照明をオフ
AURACAST	 > 3s 	Sändningsläge	Yayın modu	ブロードキャストモード
	 ① 	Justering av efterklang	Reverb Yoğunluk Ayarı	リバーブ強度調整
	 ② 	Justera mikrofonvolym	Mikrofon Giriş Sesi	マイク入力音量調整
	 ③ 	Justera gitarringångsnivå	Gitar Giriş Sesi	ギター入力音量
GAIN	 	Justering av gitarr gain	Gitar Giriş Kazancı	ギター入力ゲイン

		CN	TW	KO	AU
		功能	功能	기능	الوظيفة
	 > 3s 	开机 / 关机	開機 / 關機	전원 켜기/끄기	تشغيل/إيقاف تشغيل
		调低 / 调高音量	調低 / 調高音量	볼륨 작게/크게	خفض / رفع الصوت
 TWS	 x1	蓝牙模式	藍牙模式	블루투스 모드	وضع البلوتوث
	 x2	TWS 模式 (开/关)	TWS 模式 (開/關)	TWS 모드(켜기/끄기)	وضع TWS (تشغيل/إيقاف)
	 > 3s 	断开蓝牙连接	斷開藍牙連接	블루투스 연결 해제	قطع اتصال البلوتوث
	 x1	播放 / 暂停	播放 / 暫停	재생 / 일시정지	تشغيل / إيقاف مؤقت
	 x2	下一首	下一首	다음 트랙	المسار التالي
	 x3	上一首	上一首	이전 트랙	المسار السابق
	 x1	低音调到最大	低音調到最大	베이스 최대	الجهر على الحد الأقصى
	 > 8s 	恢复出厂设置 (已接通电源)	恢復出廠設定 (已接通電源)	공장 초기화 (전원 연결됨)	إعادة ضبط المصنع (موصول بالطاقة)
	 x1	切换灯光效果	切換燈光效果	조명 효과 전환	تبدیل تأثيرات الإضاءة
	 > 3s 	关闭灯光	關閉燈光	조명 끄기	إيقاف الإضاءة
	 > 3s 	广播模式	廣播模式	방송 모드	وضع البث
	 ① 	混响强度调节	混響強度調節	리버브 강도 조절	ضبط شدة الصدى
	 ② 	麦克风输入音量	麥克風輸入音量	마이크 입력 볼륨	ضبط صوت مدخل الميكروفون
	 ③ 	吉他输入音量	吉他輸入音量	기타 입력 볼륨	ضبط صوت مدخل الجيتار
	 	吉他输入增益	吉他輸入增益	기타 입력 게인	تضخيم مدخل الجيتار

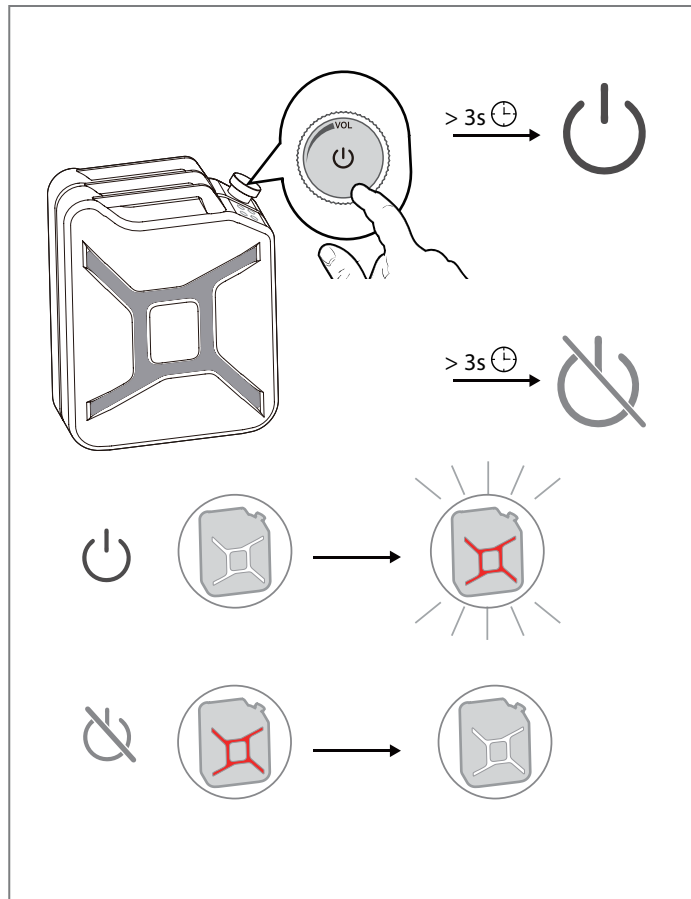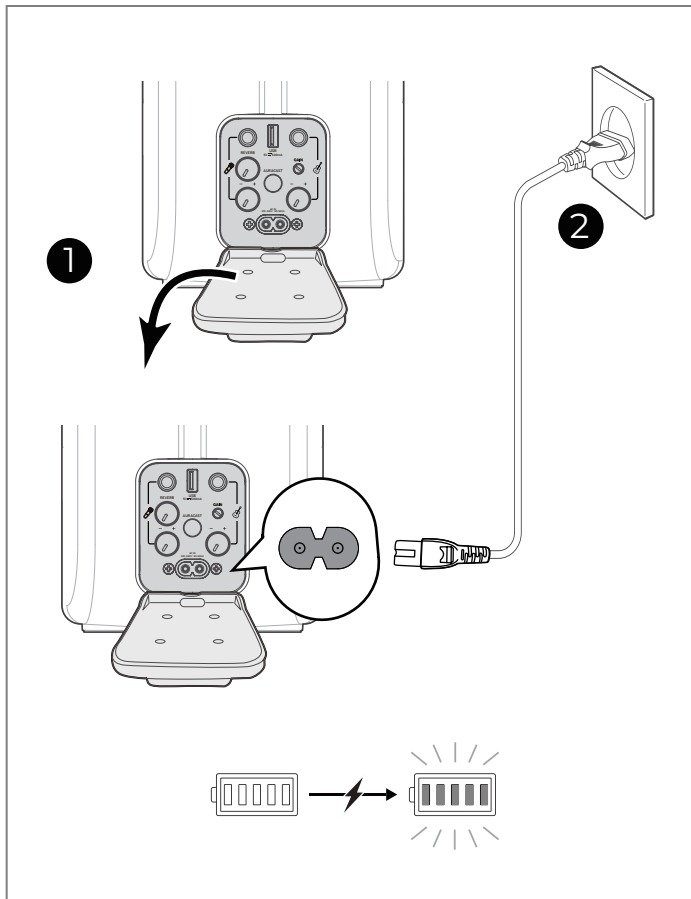  

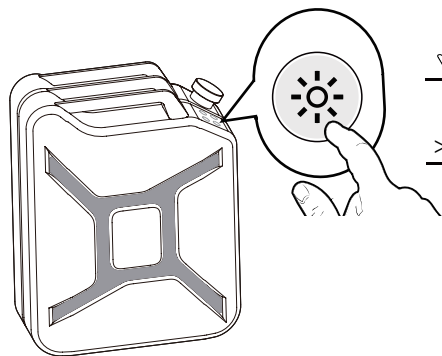 


☀️ x1 → Switch Lighting

> 3s ⌚ → Turn Off



 6 lighting modes

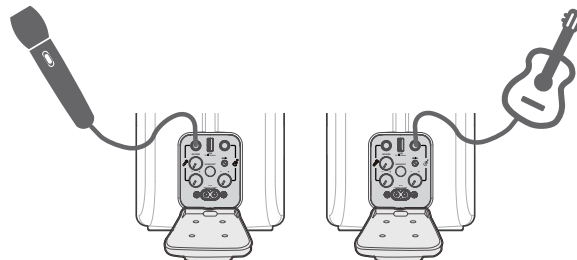


MIC

GUITAR



REVERB

 GUITAR GAIN

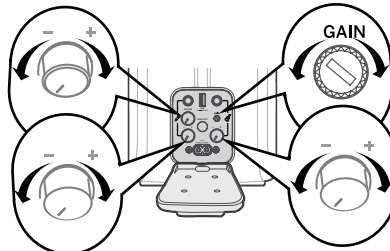


MIC VOL

  GUITAR VOL

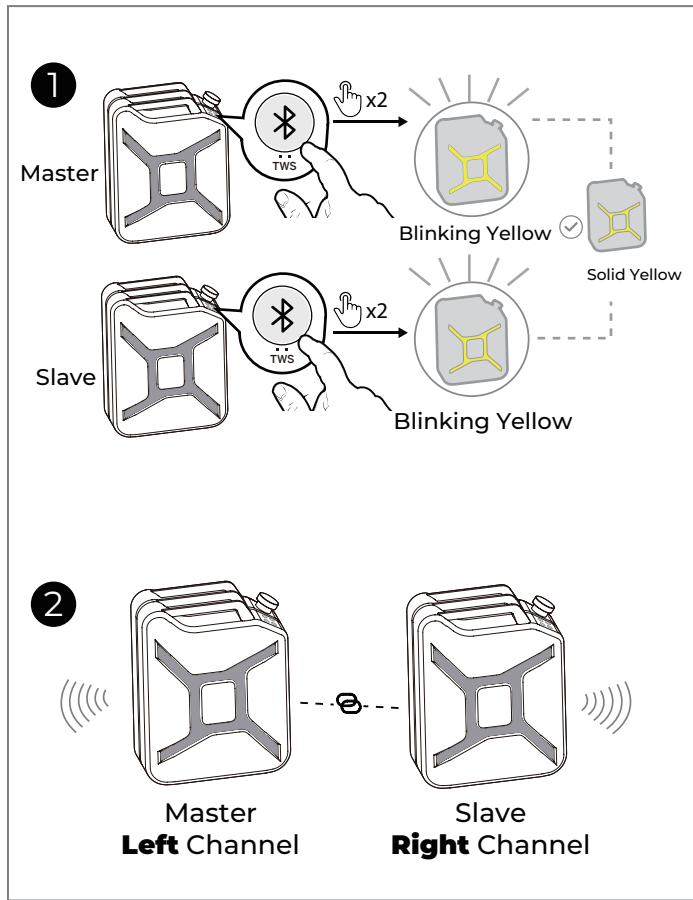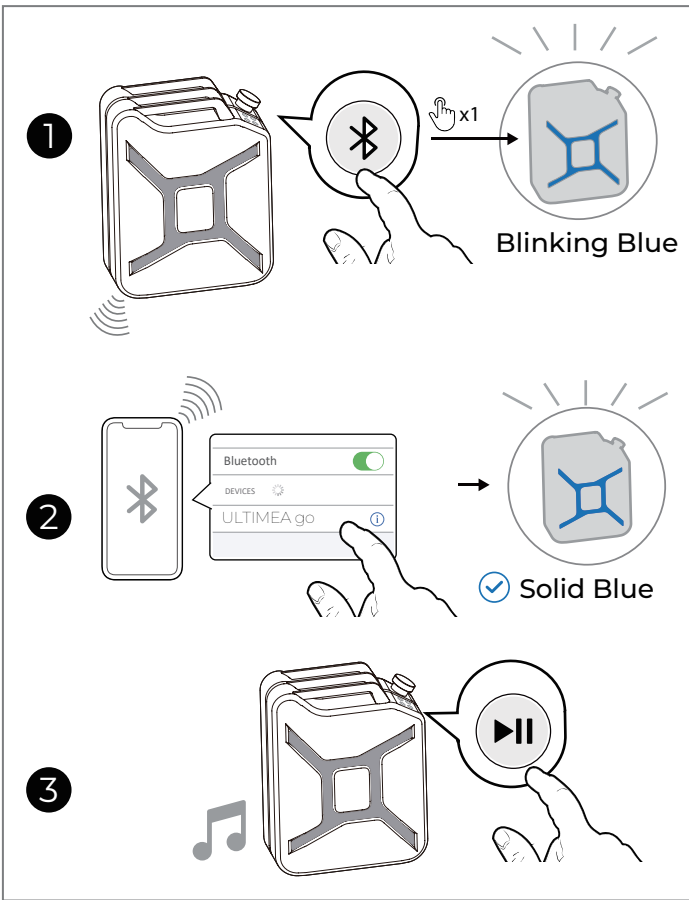




AURACAST

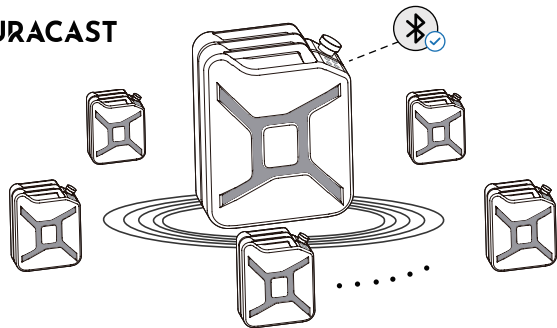 

1

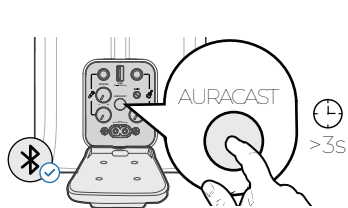 


Master **a**



Blinking Purple

 2

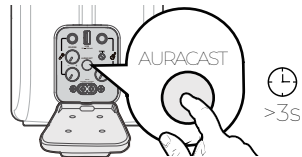


Slave **b c d e**



Blinking Purple

 3

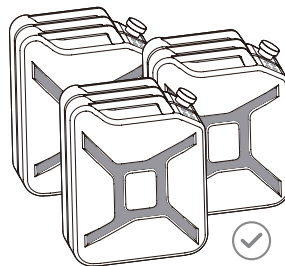


Slave **b c d**




Solid Purple

 4

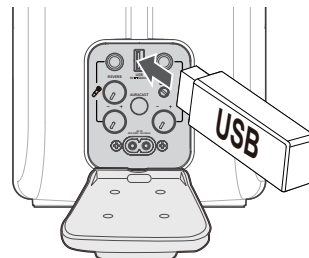


Master **a**

 OR

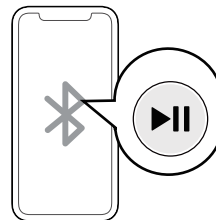




1

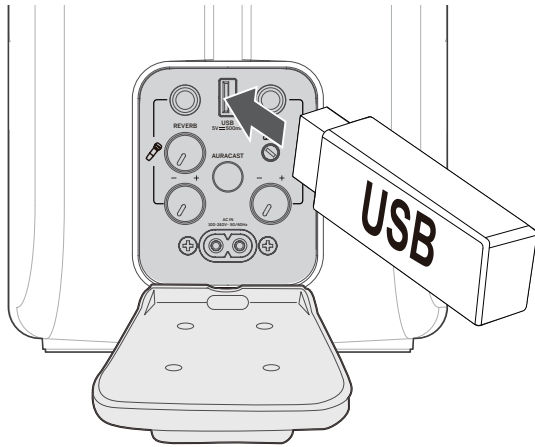 

2

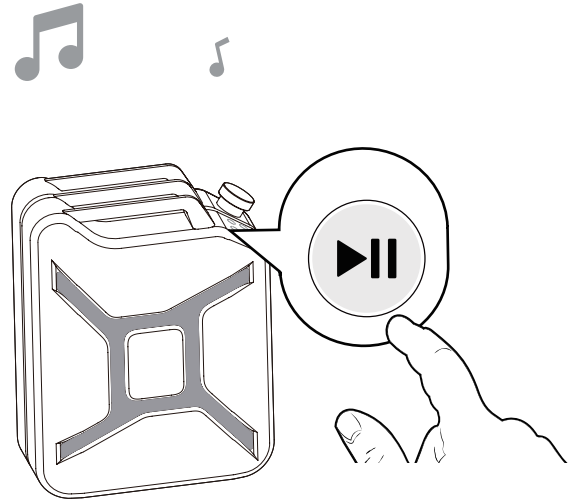 



RMS : **120 W**

AC power / Wechselstromversorgung / Alimentation CA / Alimentación de CA / Alimentazione CA / Alimentação CA / Wisselstroomvoeding / Zasilanie AC /
Växelströmsmatning / AC Gücü / AC電源 / 交流電源 / 交流電源 / 교류 전원 / طاقة التيار المتردد : **100-240V~ 50/60Hz**

Frequency response / Frequenzgang / Réponse en fréquence / Respuesta de frecuencia / Risposta in frequenza / Resposta de frequência / Frequentierespons /
Pasma przenoszenia / Frekvensomfång / Frekans tepki / 周波数応答 / 频率响应 / 頻率響應 / 주파수 응답 / استجابة التردد : **50Hz-20KHz, -6dB**

Speaker Unit / Lautsprechereinheit / Unité de haut-parleur / Unidad de altavoz / Unità altoparlante / Unidade de alto-falante / Luidsprekerunit / Jednostka
głośnikowa / Högtalarenhet / Hoparlör birimi / スピーカーユニット / 扬声器单元 / 揚聲器單元 / 스피커 유닛 / وحدة مكبر الصوت : **3" x 2+ 5" x 2+ 1"x 1**

Bluetooth version / Bluetooth-Version / Version Bluetooth / Versión Bluetooth / Versione Bluetooth / Versão do Bluetooth / Bluetooth-versie / Wersja Bluetooth /
Bluetooth-version / Bluetooth sürümü / Bluetoothバージョン / 蓝牙版本 / 藍牙版本 / 블루투스 버전 / إصدار البلوتوث : **V 5.4**

USB direct version / USB-Direktversion / Version USB directe / Versión directa USB / Versione USB diretta / Versão USB direta / USB-directe versie /
Wersja bezpośrednia USB / Direkt USB-version / USB doğrudan sürümü / USBダイレクトバージョン / USB直读版本 / USB直讀版本 / USB 다이렉트 버전 / إصدار USB المباشر :
USB(2.0) / FAT32, MP3 / 5V DC 500mA

Battery capacity / Batteriekapazität / Capacité de la batterie / Capacidad de la batería / Capacità della batteria / Capacidade da bateria / Batterijcapaciteit /
Pojemność baterii / Batterikapacitet / Pil kapasitesi / バッテリー容量 / 电池容量 / 電池容量 / U배터리 용량 / سعة البطارية : **5200mAh**


Product dimensions (W x H x D) / Produktabmessungen (B x H x T) / Dimensions du produit (L x H x P) / Dimensiones del producto (An x Al x Pr) / Dimensioni del
prodotto (L x A x P) / Dimensões do produto (L x A x P) / Productafmetingen (B x H x D) / Wymiary produktu (S x W x G) / Produktmått (B x H x D) /
Ürün boyutları (G x Y x D) / 製品サイズ (幅 x 高さ x 奥行) / 产品尺寸 (宽 x 高 x 深) / 產品尺寸 (寬 x 高 x 深) / 제품 크기(가로 x 세로 x 깊이) / أبعاد المنتج (العرض x الارتفاع x العمق) :
355 x 455 x 155 mm / 14.0 x 17.9 x 6.1 in

Package dimensions (W x H x D) / Verpackungsmaße (B x H x T) / Dimensions de l'emballage (L x H x P) / Dimensiones del paquete (An x Al x Pr) / Dimensioni
dell'imballo (L x A x P) / Dimensões da embalagem (L x A x P) / Verpakingsafmetingen (B x H x D) / Wymiary opakowania (S x W x G) / Förpackningsmått
(B x H x D) / Kutu boyutları (G x Y x D) / 梱包サイズ (幅 x 高さ x 奥行) / 包裝尺寸 (寬 x 高 x 深) / 包裝尺寸 (寬 x 高 x 深) / 포장 크기(가로 x 세로 x 깊이) /
أبعاد العبوة (العرض x الارتفاع x العمق) : **440 x 567 x 250 mm / 17.3 x 22.3 x 9.8 in**

Package weight / Paketgewicht / Poids du colis / Peso del paquete / Peso del pacchetto / Peso da embalagem / Verpakingsgewicht /
Waga opakowania / Förpackningsvikt / Kutu ağırlığı / 梱包重量 / 包裝重量 / 包裝重量 / 포장 무게 / وزن العبوة : **11kg / 24,3lbs**

Operating temperature / Betriebstemperatur / Température de fonctionnement / Temperatura de funcionamiento / Temperatura di esercizio / Temperatura de
operação / Bedrijfstemperatuur / Temperatura pracy / Driftstemperatur / Çalışma sıcaklığı / 動作温度 / 工作温度 / 工作温度 / 작동 온도 / درجة حرارة التشغيل : **0°C - 45°C**

PROPER DISPOSAL INSTRUCTIONS

 This mark shown on the product or its packaging, indicates that this product should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

FCC REGULATORY COMPLIANCE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

ISED WARNINGS

CAN ICES (B)/NMB (B)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de classe B est conforme à la norme ICES-003 du Canada.

RF exposure / Exposition RF

To comply with ISED RF exposure limits, maintain ≥ 20 cm between the radiator and your body.

Pour respecter les limites d'exposition RF d'ISDE, gardez ≥ 20 cm entre le radiateur et votre corps.

Antenna statement / Déclaration d'antenne

The integrated antenna has been approved by ISED; no modifications or third-party antennas are allowed.

L'antenne intégrée est approuvée par ISDE; aucune modification ni antenne tierce n'est autorisée.

WIRELESS FREQUENCY RANGE AND WIRELESS OUTPUT POWER:

Frequency: 2.402GHz-2.48GHz

⚠ **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

CE WARNINGS

- 1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- 2) **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 3) **WARNING:** The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.
- 4) Frequency: 2.402GHz-2.48GHz
- 5) The Max. transmit power: 10 dBm

BATTERY SAFETY WARNINGS

Batteries (battery pack or installed batteries) must not be exposed to excessive heat, such as direct sunlight, open flames, or other heat sources.

- 1) **Incorrect Replacement:** Replacing the battery with an incorrect type may defeat safety safeguards and result in fire, explosion, or chemical leakage.
- 2) **Fire or Crushing:** Do not dispose of batteries in fire or a hot oven. Do not mechanically crush or cut the battery. These actions may cause an explosion.
- 3) **High Temperature:** Do not leave the battery in an extremely high-temperature environment. Doing so may result in an explosion or the leakage of flammable liquid or gas.
- 4) **Low Pressure:** Do not subject the battery to extremely low air pressure. This may cause an explosion or the leakage of flammable liquid or gas.

Safety Instructions

- (1) Please read and keep these instructions. Follow all warnings and instructions.
- (2) Do not use the device near water, in damp environments, or in the rain. Avoid liquid spills and do not place objects containing liquids (such as vases) on the device.
- (3) Clean only with a dry cloth. Do not use liquid cleaners.
- (4) Do not block ventilation openings or install the device in a confined space. Ensure proper ventilation according to the manufacturer's instructions.
- (5) Do not install the device near heat sources such as radiators, stoves, or amplifiers, and do not cover the ventilation openings with items like newspapers or curtains.
- (6) Use only attachments, stands, or accessories specified by the manufacturer. Be cautious when moving the device on wheels to prevent tipping.
- (7) Protect the power cord from being walked on, pinched, or bent, especially at plugs, convenience receptacles, and the point where they exit from the device.
- (8) Do not modify the polarized or grounding-type plug. If the plug does not fit into your outlet, consult an electrician to replace the outlet.
- (9) Unplug the device during lightning storms or when unused for long periods. To completely disconnect the device, unplug it from the power outlet and ensure the plug is easily accessible.
- (10) Do not place any open flame sources, such as lit candles, on the device.
- (11) Do not attempt to open the device. There is a risk of dangerous high voltage. No user-serviceable parts inside. All servicing must be carried out by qualified personnel.
- (12) The installation height of the device must not exceed 2 meters.



More safety info
via QR code

EU Declaration of Conformity

We (Manufacturer is responsible for this declaration)Ultimea Technology (Shenzhen) Limited (Company name)
20th Floor, Building 4, Tianan Cloud Park, Bantian St.,Longgang District Shenzhen, China 518000 (Company address)

Declare under our sole responsibility that the product

Trade Mark: **ULTIMEA g®**

Product Name: Party Speaker

Model No.: UP1D0

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020

EN 55035:2017/A1:2020

EN IEC 61000-3-2:2019/A2:2024

EN 61000-3-3:2013/A2:2021

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-17 V3.3.1 (2024-09)

ETSI EN 300 328 V2.2.2 (2019-07)

EN 50663: 2017

EN IEC 62368-1:2020+A1:2020

Full Name: Yoyo.Yu

Position: Approbation Manager

Signature: 

Place/Date: Shenzhen, China / July. 26-2025

Trade Marks:



The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ultimea Technology (Shenzhen) Limited. is under license. Other trademarks and trade names are those of their respective owners.

ULTIMEA

Product Name: Party Speaker
Model No.: UP1D0



Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany



EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London,
United Kingdom, EC2R 8AY

@Ultimea Inc. All rights reserved, registered in the United States and other countries. 9804 Crescent Center Drive, Suite 604, Rancho Cucamonga, CA 91730

Made in China

Manufacturer: Ultimea Technology (Shenzhen) Limited
Address: 20th Floor, Building 4, Tianan Cloud Park,
Bantian St., Longgang District, Shenzhen, China 518000

Manufacturer Contact Information:

+1 888-598-8875 (US)
Mon-Fri 9am-5pm (PST)
 +49 89-628-25828 (EU)
Mon-Fri 9am-5pm (CET)

 support@ultimea.com

 support.ultimea.com

If you need our support, kindly reach out to our service team. We are always glad to help.



Download Ultimea App



Search for "ULTIMEA" on social media.



Warranty Extension Plan

Regardless of where you purchased your Ultimea product, you can easily opt for this extended warranty. Scan to check out our extended warranty options.



RoHS

