

- 1 "⏻": Power Button
Press to power on / standby.
- 2 "⇨": INPUT
Press to switch channels.
- 3 "📶": BT
Short press to select Bluetooth channel, long press to disconnect.
- 4 "📺": OPT
Press to switch to OPTICAL channel.
- 5 "🎧": AUX
Press to switch to AUX channel.
- 6 "📶": USB
Press to switch to USB channel
- 7 "💡": LED DIMMER
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.
- 8 "+": Volume Up
- 9 "-": Volume Down
- 10 "<": Previous
For BT and USB mode only: Skip to previous track.
- 11 ">": Next
For BT and USB mode only: Skip to next track.
- 12 "⏸": Play / Pause
For BT and USB mode only.
- 13 MUSIC
Press to switch to MUSIC mode.
- 14 MOVIE
Press to switch to MOVIE mode.
- 15 GAME
Press to switch to GAME mode.
- 16 17 "BASS +/-": BASS
Press to adjust bass level, the display will show: "BS -6", "BS -5", "BS -4", "BS -3", "BS -2", "BS -1", "BS 0", "BS 1", "BS 2", "BS 3", "BS 4", "BS 5", "BS 6".
- 18 "🔇": MUTE
Press to MUTE.
Press and hold the MUTE button for 5 seconds to restore factory settings

