

Remote Control

- 1 “**U**”: **Power Button**
Press to power Standby.
- 2 “**ARC**”: **ARC**
Press to switch to HDMI ARC channel.
- 3 “**SOURCE**”: **SOURCE**
Press this button to switch to the ARC-OPT-BT-USB input.
- 4 “**OPT**”: **OPT**
Press to switch to OPTICAL channel.
- 5 “**BT**”
Press to switch to Bluetooth® channel.
- 6 “**USB PEPEAT**”
USB Mode: Press to switch between single loop playback and list loop playback.
- 7 “**USB**”
Press to switch to USB channel.
- 8 “**EQ RESET**”
Press to reset all EQ settings to default.
- 9 “**SUB PEPEAT**”
Press and hold the button for 3 seconds to put the Soundbar in a state ready to pair with the subwoofer.
- 10 “**+**”: **Volume Up**
- 11 “**-**”: **Volume Down**
- 12 “**<**”: **Previous**
For Bluetooth® and USB mode only: Skip to previous track.
- 13 “**>**”: **Next**
For Bluetooth® and USB mode only: Skip to next track.
- 14 “**▶||**”: **Play / Pause**
For Bluetooth® and USB mode only.
- 15 “**🔇**”: **MUTE**
- 16 “**🔄**”: **DEVICE RESET**
Press and hold for 5 seconds to reset the device.
- 17 “**BASS MAX**”: **BASSMAX**
Press to adjust bass level, the display will show: “**B5-6**”, “**B5-5**”, “**B5-4**”, “**B5-3**”, “**B5-2**”, “**B5-1**”, “**B5 0**”, “**B5 1**”, “**B5 2**”, “**B5 3**”, “**B5 4**”, “**B5 5**”, “**B5 6**”.
- 18 “**MIDRANGE**”: **MIDRANGE**
Press to adjust alto level, the display will show: “**MR-6**”, “**MR-5**”, “**MR-4**”, “**MR-3**”, “**MR-2**”, “**MR-1**”, “**MR 0**”, “**MR 1**”, “**MR 2**”, “**MR 3**”, “**MR 4**”, “**MR 5**”, “**MR 6**”.
- 19 “**TREBLE**”: **TREBLE**
Press to adjust treble level, the display will show: “**TB-6**”, “**TB-5**”, “**TB-4**”, “**TB-3**”, “**TB-2**”, “**TB-1**”, “**TB 0**”, “**TB 1**”, “**TB 2**”, “**TB 3**”, “**TB 4**”, “**TB 5**”, “**TB 6**”.
- 20 “**MOVIE**”: **MOVIE**
Press to switch to MOVIE mode, the display will show: “**MOVI**”.
- 21 “**MUSIC**”: **MUSIC**
Press to switch to MUSIC mode, the display will show: “**MUSC**”.
- 22 “**VOICE**”: **VOICE**
Press to switch to VOICE mode, the display will show: “**VOIC**”.
- 23 “**SPORT**”: **SPORT**
Press to switch to SPORT mode, the display will show: “**SPRT**”.
- 24 “**GAME**”: **GAME**
Press to switch to GAME mode, the display will show: “**GAME**”.
- 25 “**NIGHT**”: **NIGHT**
Press to switch to NIGHT mode, the display will show: “**NIGT**”.
- 26 “**LED DIMMER**”: **LED DIMMER**
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.
- 27 “**PROMPT TONE**”: **PROMPT TONE**
Press to adjust prompt tone level, the display will show: “**PT 0**”, “**PT 1**”, “**PT 2**”, “**PT 3**”.

