

ULTIMEA



 
 
Utimea Poseidon M30

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

- Please read and keep these instructions. Follow all warnings and operate according to the instructions.
- Do not use the device near water, in damp environments, or in the rain. Avoid spilling liquids on the device or placing objects containing liquids (such as vases) on top of it.
- Clean only with a dry cloth. Do not use liquid cleaners.
- Do not block ventilation openings or install the device in a confined space. Ensure proper ventilation and install the device according to the manufacturer's instructions.
- Do not install the device near heat sources such as radiators, stoves, amplifiers, or other devices that produce heat. Do not cover the ventilation openings with items like newspapers or curtains.
- Only use attachments, stands, or accessories specified by the manufacturer. When using equipment with wheels, exercise caution when moving to prevent tipping.
- Protect the power cord from being walked on, pinched, or bent, especially at plugs, convenience receptacles, and the point where they exit from the device.
- Do not modify the plug's polarization or grounding features. If the plug does not fit into the outlet, consult an electrician to replace the outlet.
- Unplug the power cord during lightning storms or when not in use for long periods. To completely disconnect the device from the power supply, unplug it from the wall outlet and ensure the plug is easily accessible.
- Do not place any open flame sources, such as lit candles, on the device.
- Do not attempt to open the device. High voltage inside may cause electric shock or death. There are no user-serviceable parts inside. All servicing must be performed by qualified personnel.
- The installation height of the device must not exceed 2 meters.


2. ACCESSORIES LIST

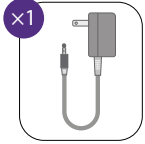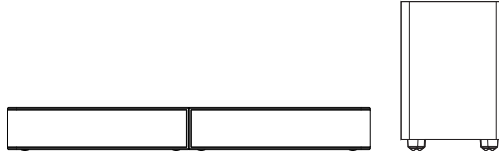


×1
Soundbar Power Adapter (1.5m / 59")



 
×1
Subwoofer Power Cord (1.5m / 59")

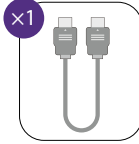


×1
HDMI Cable (1.5m / 59")

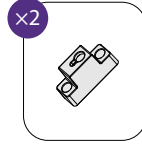 


×2
Mount Brackets

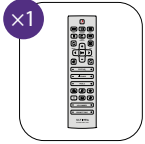 

×1
Remote Control

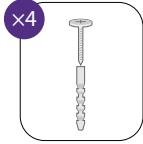 


×4
Wall Mount Screws & Anchors

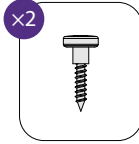 

×2
Screws



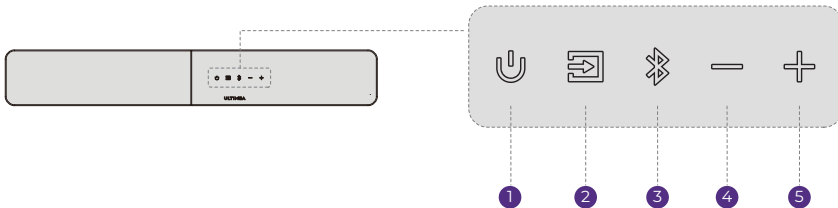  


 

 


 


 


 

 

 
3. SOUNDBAR CONTROLS




Control Panel

- 1 **“⏻”:** **Power Button**
Press to power on or enter standby mode.
- 2 **“TV”:** **Source**
Press to switch input source: ARC - OPT (OPTICAL) - Bluetooth® - USB.
- 3 **“📶”:** **Bluetooth®**
Press to switch to Bluetooth® mode. The soundbar will automatically enter pairing mode. Press and hold for 3 seconds to disconnect the current device and manually pair a new device from your smartphone, PC, or TV.
- 4 **“—”:** **Volume Down**
- 5 **“+”:** **Volume Up**

4. REMOTE CONTROL

 - 1 “”: **Power Button**
Press to power Standby.
- 2 “”: **ARC**
Press to switch to HDMI ARC channel.
- 3 “”: **SOURCE**
Press this button to switch to the ARC-OPT-BT-USB input.
- 4 “”: **OPT**
Press to switch to OPTICAL channel.
- 5 “”: **Bluetooth®**
Press to switch to Bluetooth® channel.
- 6 “”: **USB REPEAT**
USB Mode: Press to switch between single loop playback and list loop playback.
- 7 “”: **USB**
Press to switch to USB channel.
- 8 “”: **EQ RESET**
Press to reset all EQ settings to default.
- 9 “”: **SUB PAIR**
Press and hold the button for 3 seconds to put the Soundbar in a state ready to pair with the subwoofer.
- 10 “+”: **Volume Up**
- 11 “-”: **Volume Down**
- 12 “<”: **Previous**
For Bluetooth® and USB mode only: Skip to previous track.
- 13 “>”: **Next**
For Bluetooth® and USB mode only: Skip to next track.
- 14 “”: **Play / Pause**
For Bluetooth® and USB mode only.
- 15 “”: **MUTE**
- 16 “”: **DEVICE RESET**
Press and hold for 5 seconds to reset the device.
- 17 “”: **BASSMX**
Press to adjust bass level, the display will show: “B5-6”, “B5-5”, “B5-4”, “B5-3”, “B5-2”, “B5-1”, “B5 0”, “B5 1”, “B5 2”, “B5 3”, “B5 4”, “B5 5”, “B5 6”.
- 18 “”: **MIDRANGE**
Press to adjust alto level, the display will show: “MR-6”, “MR-5”, “MR-4”, “MR-3”, “MR-2”, “MR-1”, “MR 0”, “MR 1”, “MR 2”, “MR 3”, “MR 4”, “MR 5”, “MR 6”.
- 19 “”: **TREBLE**
Press to adjust treble level, the display will show: “T3-6”, “T3-5”, “T3-4”, “T3-3”, “T3-2”, “T3-1”, “T3 0”, “T3 1”, “T3 2”, “T3 3”, “T3 4”, “T3 5”, “T3 6”.
- 20 “”: **MOVIE**
Press to switch to MOVIE mode, the display will show: “MOVI”.
- 21 “”: **MUSIC**
Press to switch to MUSIC mode, the display will show: “MUSC”.
- 22 “”: **VOICE**
Press to switch to VOICE mode, the display will show: “VOIC”.
- 23 “”: **SPORT**
Press to switch to SPORT mode, the display will show: “SPRT”.
- 24 “”: **GAME**
Press to switch to GAME mode, the display will show: “GAME”.
- 25 “”: **NIGHT**
Press to switch to NIGHT mode, the display will show: “NIGT”.

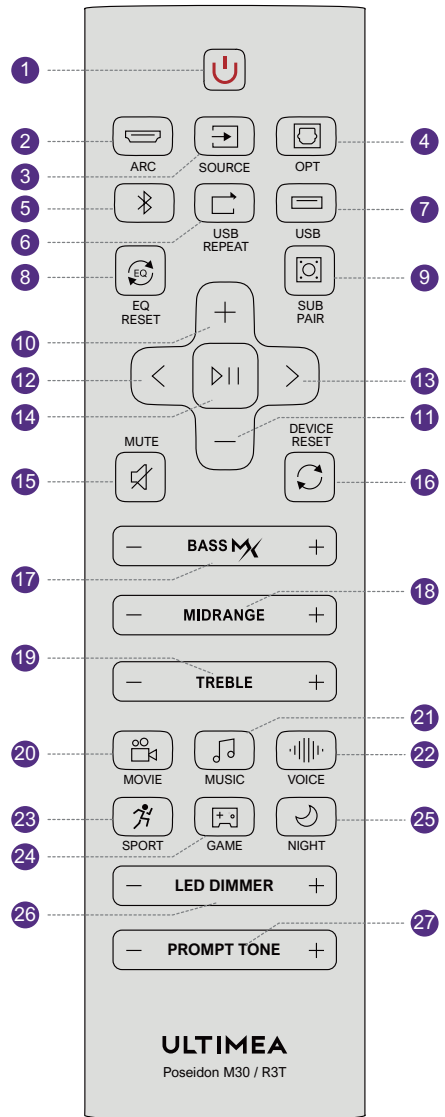


- 26 “**LED DIMMER**”: **LED DIMMER**
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.
- 27 “**PROMPT TONE**”: **PROMPT TONE**
Press to adjust prompt tone level, the display will show: “PT 0”, “PT 1”, “PT 2”, “PT 3”.


5. SOUNDBAR INSTALLATION

Align the seams of the two parts and twist them together until securely connected.

 Caution: Make sure the soundbar is powered off during assembly.

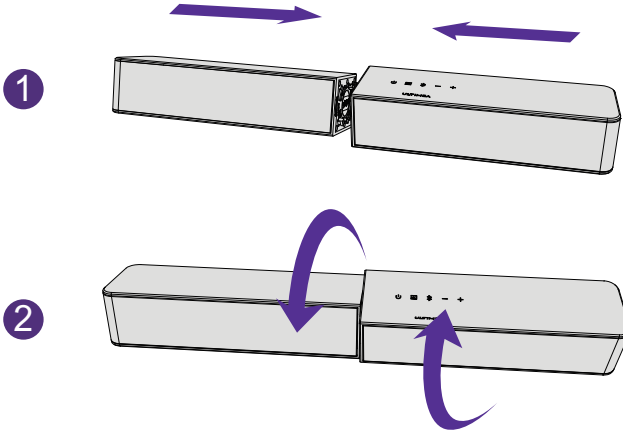

 
6. REAR PANEL

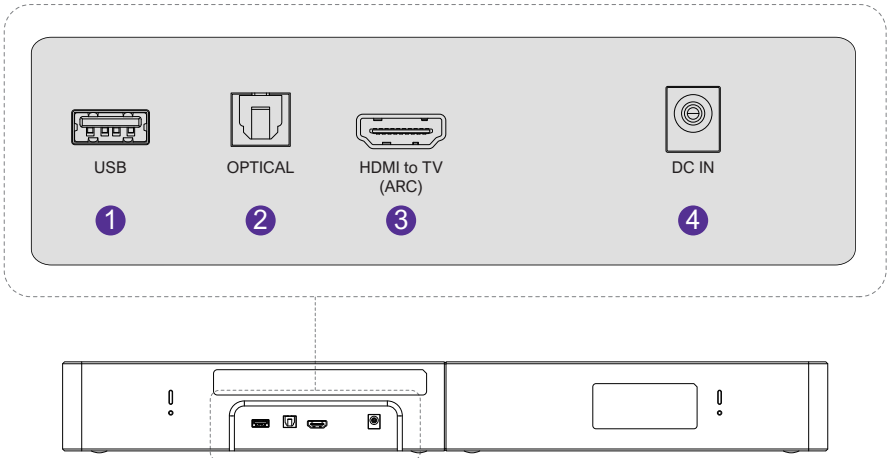


Note: **USB** Supports MP3 or FLAC files.

9. CONNECT AND POWER ON

 
- 1 Plug the soundbar power adapter into a wall outlet.

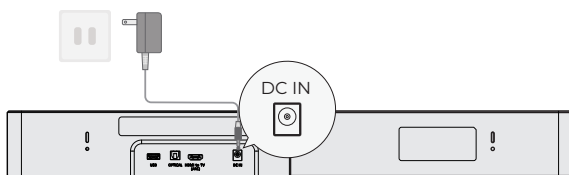

 - 2 Plug the subwoofer power cable into a wall outlet.

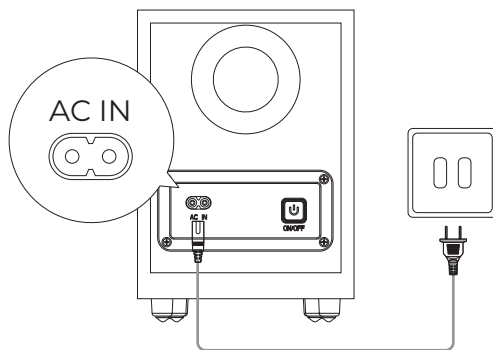


- 3 Note: It is recommended to use disposable alkaline batteries. Rechargeable batteries are not recommended.

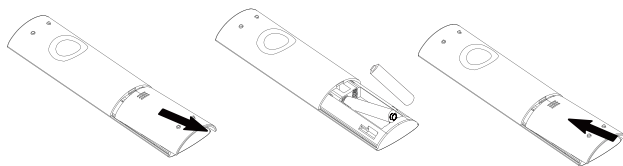


Batteries Not Included.

10. CONNECT TO TV VIA HDMI ARC

 
- 1 Connect one end of the HDMI cable to the ARC port on the back of your TV.

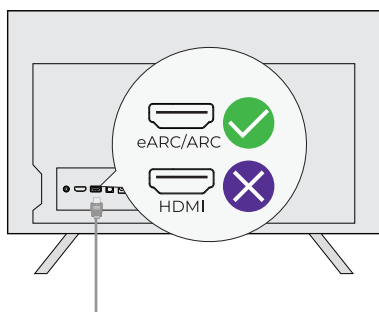

 - 2 Connect the other end to the ARC port on the soundbar.

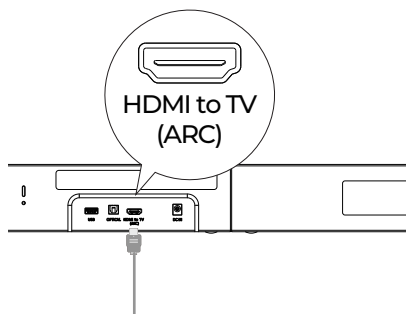

 - 3 Press the "Source" button on the soundbar or remote control to select the "ARC" input.

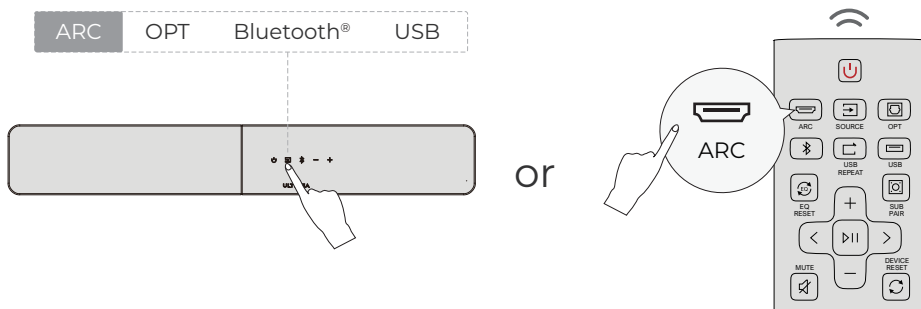


If there is no sound, try setting the TV audio output to PCM: TV Settings > Home > Settings > Sound > Digital Audio Output > PCM

HDMI ARC supports two-way audio transmission between your TV and audio system through a single HDMI cable.


Note: Please enable the "CEC" function on your TV. When ARC is connected, your TV remote control can control both the soundbar and the TV simultaneously: 1 Power On/Off 2 Adjust Volume.

11. CONNECT TO TV VIA OPTICAL CABLE

 - 1 Make sure the TV's port is OPTICAL OUT. Connect both ends of the optical cable to the OPTICAL ports on the TV and the soundbar.

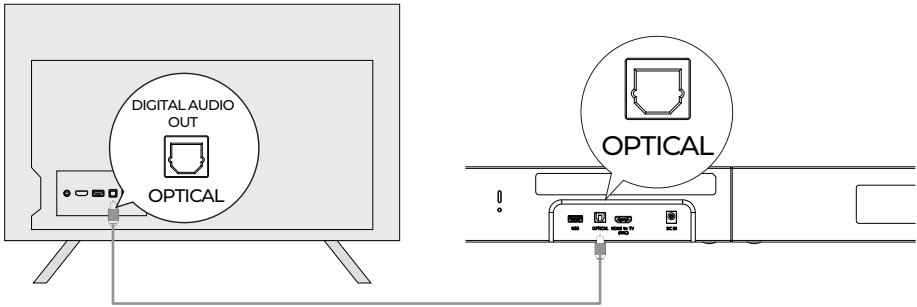


 - 2 Make sure the optical plug is inserted correctly as shown in the picture. Do not insert it upside down, as this may damage the optical port.
- 3 TV Settings > Home > Settings > Sound > Digital Audio Output > PCM

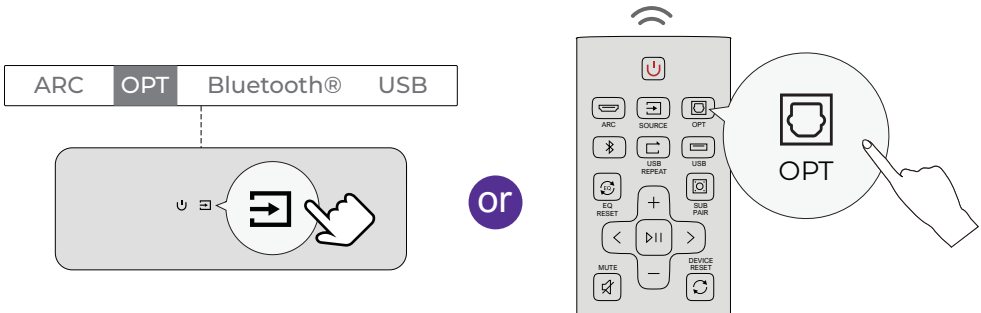

Note: If audio is playing from the TV's internal speakers, mute the TV or turn the volume down to the minimum.

 12. CONNECT TO Bluetooth®

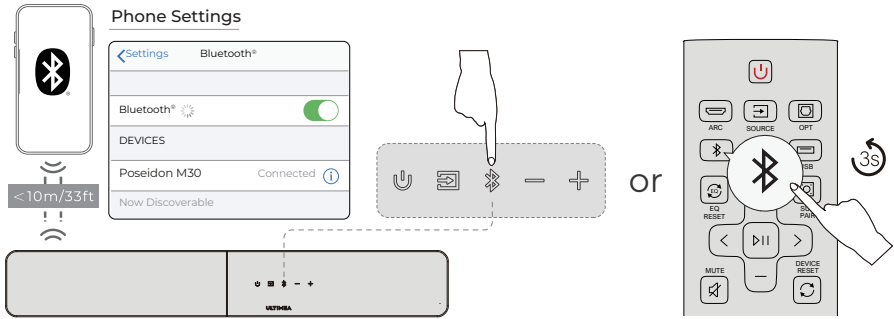


- 1 Press the "Bluetooth" button on the soundbar or press the "Bluetooth" button on the remote control to enter Bluetooth® pairing mode
- 2 Go to the Bluetooth® settings on your phone, find and select "Poseidon M30" to connect the soundbar
- 3 Note: If it's already in Bluetooth® mode and connected, press and hold the "Bluetooth" button for 3 seconds to disconnect the current device and then manually choose to connect to a new device on your mobile phone / PC / TV

13. RE-PAIR SUBWOOFER

Normally, the Soundbar and subwoofer are pre-paired. If the connection is lost, please follow the steps below to re-pair them:



 
- 1 Press and hold the "SUB PAIR" button on the remote control for 5 seconds. The main unit display will flash "SUB" to indicate pairing mode.

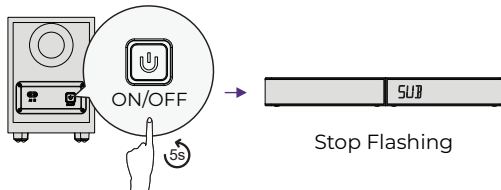

- 2 Press and hold the ON/OFF button on the back of the subwoofer for 5 seconds to enter pairing mode.
- 3 When pairing is successful, the main unit display will stop flashing and the subwoofer indicator light will remain steadily on.

14. RESTORE FACTORY SETTINGS

 Press and hold the **DEVICE RESET** for 5 seconds to restore factory


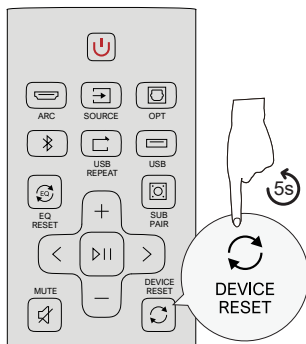


15. ADJUST PROMPT SOUND VOLUME

If you find the Soundbar's prompt tone too loud, you can adjust its volume through the **ULTIMEA App**.



  Download Ultimea App

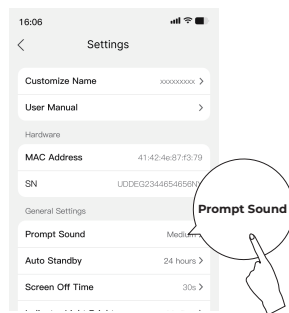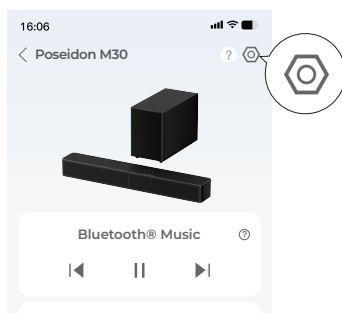

- 1 Scan the QR code to download the ULTIMEA App, then add your Soundbar to the app.
- 2 Open the Soundbar's Device Details page, tap the Settings icon in the upper-right corner, and select "Prompt Sound Volume". Adjust the level as needed.

Model Number	UC000
Power Supply	18V 2A DC(Soundbar); 100-240V~50/60Hz AC (Subwoofer)
Soundbar Drivers	Soundbar: 2.25" × 2, Subwoofer: 5.25"
Auto Standby	The soundbar will turn to standby mode if there is no audio signal for 15 minutes. You can set the standby time in the App
Standby Power	<0.5W
Operating Temperature	-10°C – 45°C / 14°F – 113°F
Bluetooth® Version	6.0

Soundbar	600 × 70 × 90 mm / 23.6" × 2.8" × 3.5"
Subwoofer	300 × 200 × 150 mm / 11.8" × 7.9" × 5.9"
Packaging	335 × 437 × 197 mm / 13.2" × 17.2" × 7.8"
Packaging Weight	5.8 kg / 12.8 lbs

USB Output	5V 500mA DC
Operating Altitude	2000 meters above sea level
Wall Mount Screw	4 × 35 mm / 0.2" × 1.4"
Bracket Screws Diameter	3 mm / 0.12"
Remote Control Battery Type	2 × AAA (NOT INCLUDED)
Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.	

PROPER DISPOSAL INSTRUCTIONS



This mark shown on the product or its packaging, indicates that this product should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

WIRELESS FREQUENCY RANGE AND WIRELESS OUTPUT POWER:

Frequency: 2.402GHz-2.48GHz

The Max. transmit power (Applies only to the EU): 10 dBm

FCC REGULATORY COMPLIANCE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CE WARNINGS

- (1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- (2) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- (3) WARNING: The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.
- (4) Frequency: 2.402GHz-2.48GHz
- (5) The Max. transmit power: 10 dBm

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- 3) The device meets the exemption from the routine evaluation limits in issue6 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la numéro 6 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Wireless Capability Description:

The subwoofer in the system is designed for wired connection and does not have the ability to transmit or receive wireless signals. The remote control uses infrared (IR) technology for device control and does not support any other wireless signal transmission or reception capabilities.

 **CA WARNING:** Can expose you to BPA, a carcinogen, and BPA, a reproductive. toxicant. See www.P65Warnings.ca.gov.

ULTIMEA

Product Name: Soundbar
Model No.: UC000
Soundbar HVIN: UC000
Subwoofer HVIN: UC000B

EC REP Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany

UK REP EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London, United Kingdom, EC2R 8AY

@Ultimea Inc. All rights reserved, registered in the United States and other countries. 801 S. Dupont Ave., Ste G, Ontario, CA, 91761, USA

Made in China
Manufacturer: Ultimea Technology (Shenzhen) Limited
Address: 20th Floor, Building 4, Tianan Cloud Park, Bantian St., Longgang District, Shenzhen, China 518000

Manufacturer Contact Information:

+1 888-598-8875 (US) Mon-Fri 9am-5pm (PST) +49 89-628-25828 (EU) Mon-Fri 9am-5pm (CET) support@ultimea.com support.ultimea.com

If you need our support, kindly reach out to our service team. We are always glad to help.



Soundbar MIC ID: Subwoofer MIC ID:

219-258296 219-258295 Shen Zhen Shi Xin Fei Yi Ke Ji You Xian Gong Si



Warranty Extension Plan

EU DECLARATION OF CONFORMITY

We (Manufacturer is responsible for this declaration) 20th Floor, Building 4, Tianan Cloud Park, Bantian St., Declare under our sole responsibility that the product Trade Mark: ULTIMEA Product Name: Soundbar Model No.: UC000

Ultimea Technology (Shenzhen) Limited
Longgang District Shenzhen, China 518000

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020 ETSI EN 301 489-1 V2.2.3 (2019-11) Full Name: Yoyo.Yu
EN 55035:2017/A1:2020 ETSI EN 301 489-17 V3.2.4 (2020-09) Position: Approval Manager
EN IEC 61000-3-2:2019/A2:2024 ETSI EN 300 328 V2.2.2 (2019-07) Signature:
EN 61000-3-3:2013/A2:2021 EN IEC 62311:2020 Place/Date: Shenzhen, China / Feb. 01-2026
EN IEC 62368-1:2020+A1:2020

Trade Marks:



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ultimea Technology (Shenzhen) Limited. is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.