

Ultimea Poseidon

 
 
 
 
 
 
 
 
 
M30

USER MANUAL


User Manual / Bedienungsanleitung / Manuel d'utilisation /
Manual de usuario / Manuale utente / Manual do utilizador /
Gebruikershandleiding / Instrukcja obsługi / Användarhandbok /
Kullanım kılavuzu / 取扱説明書 / 用户手册 / 使用者手冊 / 사용 설명서 /
Panduan Pengguna / دليل المستخدم / دليل المستخدم

Model No.: UC000


Product Name: Soundbar

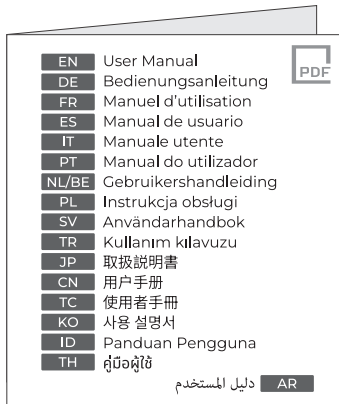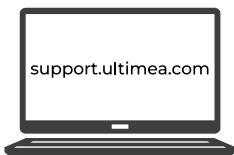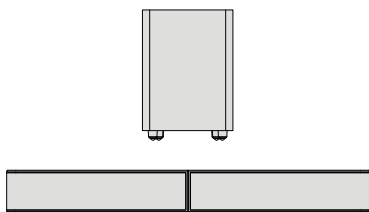

1

 

2


 


- EN Align the seams of the two parts and rotate to connect. Do not operate with power on.
 DE Richten Sie die Nähte der beiden Teile aus und drehen Sie sie zum Verbinden. Nicht unter Strom betreiben.
 FR Alignez les coutures des deux parties et tournez pour connecter. Ne pas utiliser sous tension.
 ES Alinee las costuras de las dos partes y gírelas para conectar. No opere con la energía encendida.
 IT Allineare le giunzioni delle due parti e ruotare per connettere. Non operare con l'alimentazione accesa.
 PT Alinhe as costuras das duas partes e gire para conectar. Não opere com a energia ligada.
 NL/BE Lijn de naden van de twee delen uit en draai om te verbinden. Niet bedienen met stroom ingeschakeld.
 PL Wyrównaj szwy dwóch części i obróć, aby połączyć. Nie obsługiwać pod napięciem.
 SV Justera sömmarna på de två delarna och rotera för att ansluta. Använd inte med strömmen på.
 TR İki parçanın dikişlerini hizalayın ve bağlamak için döndürün. Güç açıkken çalıştırmayın.
 JP 2つの部品の継ぎ目を揃え、回転させて接続してください。電源が入った状態で操作しないでください。
 CN 对齐两个部件的接缝并旋转连接。请勿在通电状态下操作。
 TC 對齊兩個部件的接縫並旋轉連接。請勿在通電狀態下操作。
 KO 두 부품의 이음을 맞추고 회전하여 연결하십시오. 전원이 켜진 상태에서 조작하지 마십시오.
 ID Ratakan sambungan dua komponen dan putar untuk menghubungkanannya.
 Jangan mengoperasikan saat dialiri listrik.



TH จัดแนวรอยต่อของชิ้นส่วนสองชิ้นแล้วหมุนเพื่อเชื่อมต่อ อย่าดำเนินการขณะมีไฟฟ้าเข้า




قم محاذاة اللحامات بين الجزئين وقم بتدويرهما للاتصال. لا تقم بالتشغيل أثناء تشغيل الطاقة.

  AR

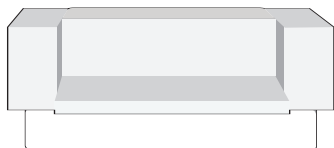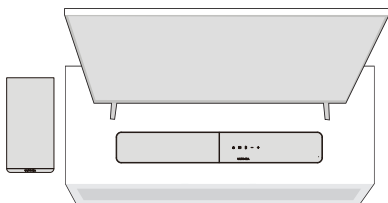


or

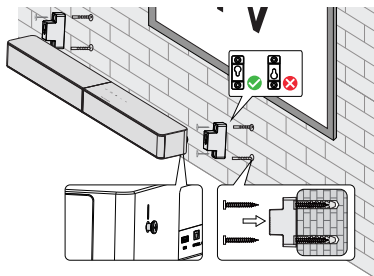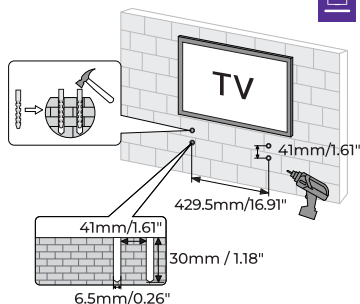  

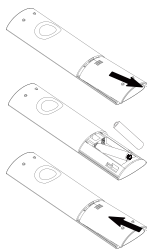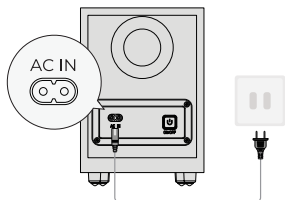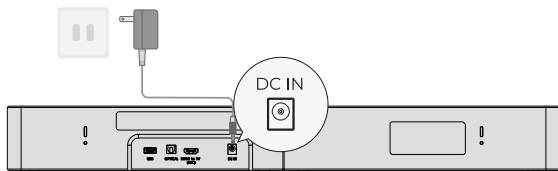   

EN Batteries Not Included.
DE Batterien nicht enthalten.
FR Piles non incluses.
ES Baterías no incluidas.
IT Batterie non incluse.
PT Baterias não incluídas.
NL/BE Batterijen niet inbegrepen.
PL Baterie nie są dołączone.
SV Batterier ingår ej.
TR Piller dahil değildir.
JP 電池は含まれていません。
CN 电池不包含在内。
TC 電池不包含在内。
KO 배터리는 포함되지 않습니다.
ID Baterai tidak termasuk.
TH แบตเตอรี่ไม่รวมอยู่ด้วย
البطاريات غير مشمولة. AR

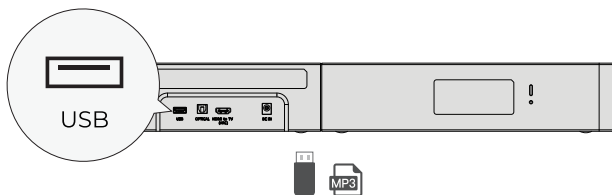 



2 HDMI ARC

 
4 OPTICAL

6 Single/All Repeat / Einzeltitel/Alle wiederholen / Répétition d'un titre/de tous / Repetir una pista/todas / Ripeti singolo/tutti / Repetir uma faixa/todas / Eén nummer/alles herhalen / Powtórz jeden utwór/wszystkie / Upprepa en/alla / Tek paraça/tümünü tekrarla / 1曲/全曲リピート / 单曲/全部循环 / 單曲/全部循環 / 한 곡/전체 반복 / Ulangi satu/semua / เล่นซ้ำเพลงเดียว/ทั้งหมด / تكرار واحد/الكل

7 USB


9 Subwoofer Pair / Subwoofer-Kopplung / Appairage du caisson de basses / Emparejar subwoofer / Associazione del subwoofer / Emparellar subwoofer / Subwoofer koppelen / Parowanie subwoofera / Subwooferparkoppeling / Subwoofer Esgitimre / サブウーファーペアリング / 低音炮配对 / 低音炮配对 / 서브우퍼 페어링 / Pasangkan Subwoofer / จักรขุมทุ้มพ้อง / اقتران مضخم الصوت

10 Volume and Playback Control / Lautstärke- und Wiedergabesteuerung / Contrôle du volume et de la lecture / Control de volumen y reproducción / Controllo del volume e della riproduzione / Controle de volume e reprodução / Volumeregeling en afspelbediening / Regulacja głośności i odtwarzania / Völm- och uppspelningskontroll / Ses ve Oynatma Kontrolü / 音量および再生コントロール / 音量と播放控制 / 音量 및 재생 제어 / Kontrol Volume dan Pemutaran / การควบคุมระดับเสียงและการเล่น / التحكم في مستوى الصوت والتشغيل

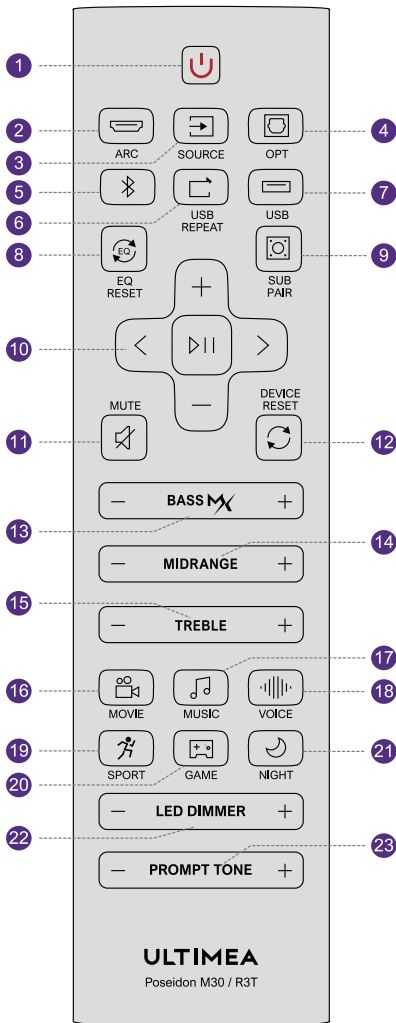



- 11 Mute / Stumm / Muet / Silencio / Muto / Mudo / Dempen / Wycisz / Ljud av / Sessiz / ミュート / 静音 / 음소거 / Senyap / ปิดเสียง / كتم الصوت
- 12 Device Reset / Gerät zurücksetzen / Réinitialisation de l'appareil / Restablecer dispositivo / Ripristino del dispositivo / Redefinir dispositivo / Apparaat resetten / Reset urządzenia / Återställ enheten / Cihazı Sıfırla / 本体リセット / 设备重置 / 裝置重設 / 기기 초기화 / Reset Perangkat / إعادة ضبط الجهاز
- 13 Bass Level / Basspegel / Niveau des basses / Nivel de graves / Livello dei bassi / Nível dos graves / Basniveau / Poziom basów / Basnivå / Bas Seviyesi / 低音レベル / 低音等級 / 低音等級 / 저음 레벨 / Level Bass / ระดับเสียงเบส / مستوى الجهير
- 14 Midrange Level / Mittenpegel / Niveau des médiums / Nivel de medios / Livello dei medi / Nível dos médios / Middenniveau / Poziom tonów średnich / Mellanregisternivå / Orta Ses Seviyesi / 中音レベル / 中音等級 / 中音等級 / 중음 레벨 / Level Midrange / ระดับเสียงกลาง / مستوى الترددات المتوسطة
- 15 Treble Level / Höhenpegel / Niveau des aigus / Nivel de agudos / Livello degli alti / Nível dos agudos / Hoogniveau / Poziom wysokich tonów / Diskantnivå / Tiz Seviyesi / 高音レベル / 高音等級 / 高音等級 / 고음 레벨 / Level Treble / ระดับเสียงแหลม / مستوى الترددات العالية
- 16 Movie / Film / Película / Filme / 映画 / 电影 / 電影 / 영화 / ภาพยนตร์ / فيلم
- 17 Music / Musik / Musique / Música / Musica / Muziek / Muzyka / Műzik / 音楽 / 音乐 / 音樂 / 음악 / เพลง / موسيقى
- 18 Voice / Stimme / Voix / Voz / Voce / Voz / Stem / Glos / Röst / Ses / 音声 / 人声 / 人聲 / 음성 / Suara / เสียงพูด / الصوت
- 19 Sport / Deporte / Esporte / Spor / スポーツ / 运动 / 運動 / 스포츠 / Olahraga / กีฬา / رياضة
- 20 Game / Spiel / Jeu / Juego / Gioco / Jogo / Spel / Gra / Spel / Oyun / ゲーム / 游戏 / 遊戲 / 게임 / เกม / ألعاب
- 21 Night / Nacht / Nuit / Noche / Notte / Noite / Noc / Natt / Gece / ナイト / 夜间 / 夜間 / 야간 / Malam / กลางคืน / ليل
- 22 Display Brightness / Anzeigehelligkeit / Luminosité de l'affichage / Brillo de la pantalla / Luminosità del display / Brilho do visor / Helderheid van het display / Jasność wyświetlacza / Skärmens ljusstyrka / Ekran Parlaklığı / 表示輝度 / 显示亮度 / 顯示亮度 / 디스플레이 밝기 / Kecerahan Layar / ความสว่างหน้าจอ / سطوع الشاشة
- 23 Prompt Tone / Hinweiston / Signal sonore / Tono de aviso / Tono di avviso / Meldingstoon / Dźwięk powiadomienia / Signalton / Uyarı Sesi / 操作音 / 提示音 / 알림음 / Nada Notifikasi / เสียงแจ้งเตือน / نغمة التنبيه

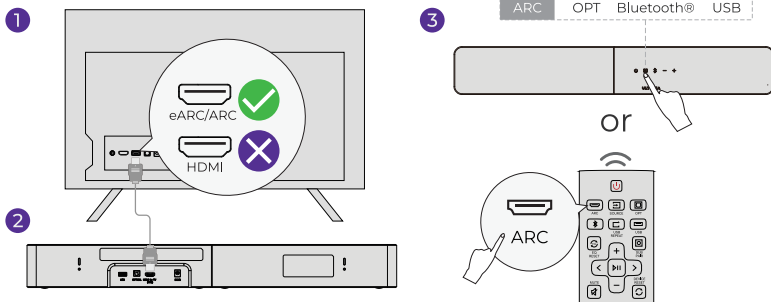 

EN If there is no sound, try setting the TV audio output to PCM:

TV Settings > Home > Settings > Sound > Digital Audio Output > PCM

Note: Please enable the "CEC" function on your TV.

When ARC is connected, your TV remote control can control both the soundbar and the TV simultaneously: **1** Power On/Off **2** Adjust Volume

DE Wenn kein Ton zu hören ist, stellen Sie den TV-Audioausgang auf PCM ein:

TV-Einstellungen > Startseite > Einstellungen > Ton > Digitaler Audioausgang > PCM

Hinweis: Aktivieren Sie die „CEC“-Funktion an Ihrem Fernseher.

Wenn ARC verbunden ist, kann die TV-Fernbedienung sowohl die Soundbar als auch den Fernseher gleichzeitig steuern: **1** Ein-/Ausschalten **2** Lautstärke einstellen

FR En cas d'absence de son, réglez la sortie audio du téléviseur sur PCM :

Paramètres TV > Accueil > Paramètres > Son > Sortie audio numérique > PCM

Remarque : Activez la fonction "CEC" sur votre téléviseur.

Lorsque ARC est connecté, la télécommande du téléviseur peut contrôler simultanément la barre de son et le téléviseur : **1** Allumer/Éteindre **2** Régler le volume

ES Si no hay sonido, configure la salida de audio del televisor en PCM:

Configuración del TV > Inicio > Ajustes > Sonido > Salida de audio digital > PCM

Nota: Active la función "CEC" en su televisor.

Cuando ARC está conectado, el control remoto del televisor puede controlar simultáneamente la barra de sonido y el televisor: **1** Encender/Apagar **2** Ajustar el volumen

IT Se non si sente alcun suono, impostare l'uscita audio della TV su PCM:

Impostazioni TV > Home > Impostazioni > Audio > Uscita audio digitale > PCM

Nota: Attivare la funzione "CEC" sul televisore.

Quando ARC è collegato, il telecomando della TV può controllare contemporaneamente la soundbar e il televisore: **1** accensione/Spegnimento **2** regolazione del volume

PT Se não houver som, defina a saída de áudio da TV para PCM:

Definições da TV > Início > Definições > Som > Saída de áudio digital > PCM

Nota: Ative a função "CEC" na sua TV.

Quando o ARC estiver conectado, o comando da TV pode controlar simultaneamente a soundbar e a TV: **1** Ligar/Desligar **2** Ajustar o volume

NL/BE Als er geen geluid is, stel de tv-audio-uitgang in op PCM:

TV-instellingen > Home > Instellingen > Geluid > Digitale audio-uitgang > PCM

Opmerking: Schakel de functie "CEC" in op uw tv.

Wanneer ARC is aangesloten, kan de afstandsbediening van de tv zowel de soundbar als de tv gelijktijdig bedienen: **1** In-/Uitschakelen **2** Volume aanpassen

**PL** **Jeśli nie ma dźwięku, ustaw wyjście audio telewizora na PCM:**

Ustawienia TV > Strona główna > Ustawienia > Dźwięk > Cyfrowe wyjście audio > PCM

Uwaga: Włącz funkcję „CEC” w telewizorze.

Po podłączeniu ARC pilot telewizora może jednocześnie sterować soundbarem i telewizorem:

- ① Włącz/Wyłącz ② Regulacja głośności

SV **Om inget ljud hörs, ställ in TV:ns ljudutgång på PCM:**

TV-inställningar > Hem > Inställningar > Ljud > Digital ljudutgång > PCM

Obs: Aktivera funktionen "CEC" på din TV.

När ARC är anslutet kan TV:ns fjärrkontroll styra både soundbaren och TV:n samtidigt:

- ① Slå på/av ② Justera volymen

TR **Ses yoksa, TV'nin ses çıkışını PCM olarak ayarlayın:**

TV Ayarları > Ana Sayfa > Ayarlar > Ses > Dijital Ses Çıkışı > PCM

Not: TV'nizde "CEC" fonksiyonunu etkinleştirin.

ARC bağlıyken, TV kumandası hem soundbar'ı hem de TV'yi aynı anda kontrol edebilir:

- ① Açma/Kapama ② Ses ayarlama

JP **音が出ない場合は、テレビの音声出力をPCMに設定してください:**

テレビ設定 > ホーム > 設定 > サウンド > デジタル音声出力 > PCM

注意: テレビの「CEC」機能を有効にしてください。

ARC接続時は、テレビのリモコンでサウンドバーとテレビを同時に操作できます: ① 電源オン/オフ ② 音量調整

CN **如果没有声音, 请将电视音频输出设置为 PCM:**

电视设置 > 首页 > 设置 > 声音 > 数字音频输出 > PCM

注意: 请开启电视的“CEC”功能。

当连接 ARC 时, 电视遥控器可同时控制 Soundbar 和电视: ① 开/关机 ② 调节音量

TC **如果没有聲音, 請將電視音訊輸出設定為 PCM:**

電視設定 > 首頁 > 設定 > 聲音 > 數位音訊輸出 > PCM

注意: 請開啟電視的「CEC」功能。

當 ARC 連接時, 電視遙控器可同時控制 Soundbar 與電視: ① 開/關機 ② 調整音量

KO **소리가 나오지 않는 경우, TV 오디오 출력을 PCM으로 설정하십시오:**

TV 설정 > 홈 > 설정 > 사운드 > 디지털 오디오 출력 > PCM

참고: TV의 "CEC" 기능을 활성화하십시오.

ARC가 연결되면 TV 리모컨으로 사운드바와 TV를 동시에 제어할 수 있습니다: ① 전원 켜기/끄기 ② 볼륨 조절

ID **Jika tidak ada suara, atur keluaran audio TV ke PCM:**

Pengaturan TV > Beranda > Pengaturan > Suara > Keluaran Audio Digital > PCM

Catatan: Aktifkan fungsi "CEC" pada TV Anda.

Saat ARC terhubung, remote TV dapat mengontrol soundbar dan TV secara bersamaan:

- ① Nyalakan/Matikan ② Atur volume

TH **หากไม่มีเสียง ให้ตั้งค่าการส่งสัญญาณเสียงของทีวีเป็น PCM:**

การตั้งค่าทีวี > หน้าแรก > การตั้งค่า > เสียง > เอาต์พุตเสียงดิจิทัล > PCM

หมายเหตุ: กรุณาเปิดใช้งานฟังก์ชัน "CEC" บนทีวีของคุณ

เมื่อเชื่อมต่อ ARC ทีวีของคุณจะสามารถควบคุมทั้งซาวด์บาร์และทีวีได้พร้อมกัน: ① เปิด/ปิด ② ปรับระดับเสียง

في حال عدم وجود صوت, اضبط مخرج الصوت في التلفزيون على PCM:

 
 
إعدادات التلفزيون > الصفحة الرئيسية > الإعدادات > الصوت > مخرج الصوت الرقمي > PCM

ملاحظة: يرجى تفعيل وظيفة "CEC" في التلفزيون.


عند توصيل ARC, يمكن لجهاز التحكم الخاص بالتلفزيون التحكم في كلٍ من مكبر الصوت الشريطي والتلفزيون في نفس الوقت:

- ① تشغيل/إيقاف ② ضبط مستوى الصوت


AR

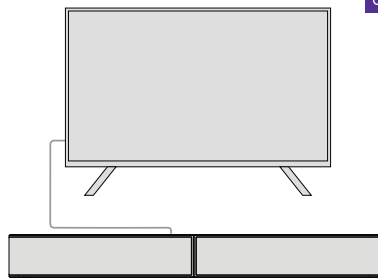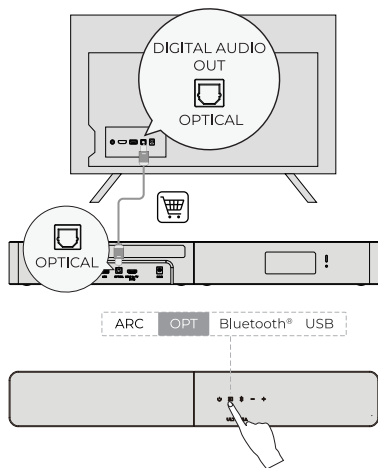


or

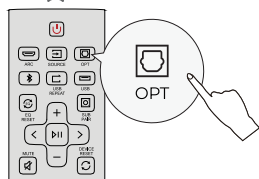 

Phone Settings

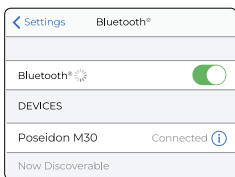 


or

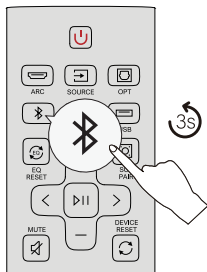 

EN	Short press to select Bluetooth® channel, press and hold for 3 seconds to disconnect.
DE	Kurz drücken, um den Bluetooth®-Kanal auszuwählen, lang drücken, um die Verbindung zu trennen.
FR	Appuyez brièvement pour sélectionner le canal Bluetooth®, appuyez longuement pour déconnecter.
ES	Presione brevemente para seleccionar el canal Bluetooth®, presione prolongadamente para desconectar.
IT	Premere brevemente per selezionare il canale Bluetooth®, premere a lungo per disconnettere.
PT	Pressione rapidamente para seleccionar o canal Bluetooth®, pressione longamente para desconectar.
NL/BE	Kort indrukken om het Bluetooth®-kanaal te selecteren, lang indrukken om de verbinding te verbreken.
PL	Krótko naciśnij, aby wybrać kanał Bluetooth®, przytrzymaj, aby rozłączyć.
SV	Tryck kort för att välja Bluetooth®-kanal, tryck länge för att koppla bort.
TR	Kısa basarak Bluetooth® kanalını seçin, uzun basarak bağlantıyı kesin.
JP	短く押してBluetooth®チャンネルを選択し、長押しして切断します。
CN	短按选择蓝牙通道，长按断开连接。
TC	短按選擇藍牙通道，長按斷開連接。
KO	짧게 눌러 블루투스 채널을 선택하고, 길게 눌러 연결을 해제하세요.
ID	Tekan singkat untuk memilih saluran Bluetooth®, tekan lama untuk memutuskan koneksi.
TH	กดสั้นเพื่อเลือกช่อง Bluetooth® กดค้างเพื่อยกเลิกการเชื่อมต่อ

اضغط ضغطة قصيرة لاختيار قناة البلوتوث، واضغط مطولاً للقطع.

 AR

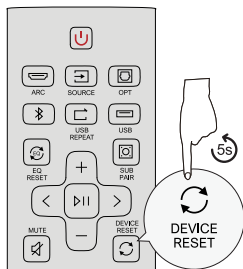

EN	Press and hold for 5 seconds to reset.
DE	Drücken und halten Sie 5 Sekunden lang, um zurückzusetzen.
FR	Appuyez et maintenez pendant 5 secondes pour réinitialiser.
ES	Mantén presionado durante 5 segundos para restablecer.
IT	Tieni premuto per 5 secondi per ripristinare.
PT	Pressione e segure por 5 segundos para redefinir.
NL/BE	Druk 5 seconden lang in om opnieuw in te stellen.
PL	Naciśnij i przytrzymaj przez 5 sekundy, aby zresetować.
SV	Håll ner i 5 sekunder för att återställa.
TR	Sıfırlamak için 5 saniye basılı tutun.
JP	5秒間押し続けてリセットします。
CN	按住5秒钟重置。
TC	按住5秒鐘重設。
KO	5초 동안 눌러 리셋합니다.
ID	Tekan dan tahan selama 5 detik untuk mengatur ulang.
TH	กดค้างไว้ 5 วินาทีเพื่อรีเซ็ต

اضغط مع الاستمرار لمدة 5 ثوانٍ لإعادة تعيين.

AR



<10m/33ft



EN	On your Android™ or iOS device, connect to the soundbar via the Ultimea app.
DE	Verbinden Sie auf Ihrem Android™- oder iOS-Gerät die Soundbar über die Ultimea-App.
FR	Sur votre appareil Android™ ou iOS, connectez-vous à la barre de son via l'application Ultimea.
ES	En su dispositivo Android™ o iOS, conéctese a la barra de sonido a través de la aplicación Ultimea.
IT	Sul tuo dispositivo Android™ o iOS, connettiti alla soundbar tramite l'app Ultimea.
PT	No seu dispositivo Android™ ou iOS, conecte-se à soundbar através do aplicativo Ultimea.
NL/BE	Op uw Android™- of iOS-apparaat verbindt u de soundbar via de Ultimea-app.
PL	Na swoim urządzeniu z systemem Android™ lub iOS połącz się z soundbarem za pomocą aplikacji Ultimea.
SV	Anslut till soundbaren via Ultimea-appen på din Android™- eller iOS-enhet.
TR	Android™ veya iOS cihazınızda, Ultimea uygulaması aracılığıyla soundbara bağlanın.
JP	お使いのAndroid™またはiOSデバイスで、Ultimeaアプリを使用してサウンドバーに接続してください。
CN	在您的Android™或iOS设备上，通过Ultimea应用连接到Soundbar。
TC	在您的Android™或iOS設備上，通過Ultimea應用連接到Soundbar。
KO	Android™ 또는 iOS 기기에서 Ultimea 앱을 통해 사운드바에 연결하세요.
ID	Pada perangkat Android™ atau iOS Anda, hubungkan ke Soundbar melalui aplikasi Ultimea.
TH	เชื่อมต่อ Android™ หรือ iOS ของคุณ เชื่อมต่อกับ Soundbar ผ่านแอป Ultimea

على جهاز Android™ أو iOS الخاص بك، اتصل بمكبر الصوت عبر تطبيق Ultimea.

AR

ULTIMEA

Product Name: Soundbar

Model No.: UC000

Soundbar HVIN: UC000

Subwoofer HVIN: UC000B



Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany



EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London, United Kingdom, EC2R 8AY

@Ultimea Inc. All rights reserved, registered in the United States and other countries.
801 S. Dupont Ave., Ste G, Ontario, CA, 91761, USA

Made in China

Manufacturer: Ultimea Technology (Shenzhen) Limited

Address: 20th Floor, Building 4, Tianan Cloud Park, Bantian St., Longgang District, Shenzhen, China 518000

Manufacturer Contact Information:

+1 888-598-8875 (US)
Mon-Fri 9am-5pm (PST)
+49 89-628-25828 (EU)
Mon-Fri 9am-5pm (CET)

✉ support@ultimea.com

🌐 support.ultimea.com

If you need our support, kindly reach out to our service team.
We are always glad to help.



Download Ultimea App



Warranty Extension Plan



Search for "ULTIMEA" on social media.



RoHS



Soundbar MIC ID:

📞 219-258296

Subwoofer MIC ID:

📞 219-258295



Shen Zhen Shi Xin Fei Yi
Ke Ji You Xian Gong Si



FR
Cet appareil,
ses accessoires,
et câbles
se recyclent



REPRISE
À LA LIVRAISON



À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

Points de collecte sur www.uefairedemesdechets.fr

General specification (English):

Model: UC000

Sound system: 2.1 channel

Power supply: 18V 2A DC(Soundbar);

100-240V~50/60Hz AC (Subwoofer)

Drivers: 2.25" x 2 (Soundbar) + 5.25"(Subwoofer)

Standby Power: <0.5W

USB Output: 5V 500mA DC

Operating Temperature: -10°C-45°C/14°F-113°F

Operating Altitude: 2000 meters above sea level

Wall Mount Screw: 4 x 35 mm / 0.2" x 1.4"

Bracket Screws Diameter: 3 mm / 0.12"

Remote Control Battery Type: 2 x AAA (NOT INCLUDED)

Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.

Dimensions

• Soundbar dimensions (W x H x D):

600 x 70 x 90 mm / 23.6" x 2.8" x 3.5"

• Subwoofer dimensions (W x H x D):

300 x 200 x 150 mm / 11.8" x 7.9" x 5.9"

• Packaging dimensions (W x H x D):

335 x 437 x 197 mm / 13.2" x 17.2" x 7.8"

Packaging Weight: 5.8 kg / 12.8 lbs

Power Consumption and Wireless Connection Setup Guide

1. Information on power consumption

This equipment complies with European COMMISSION

REGULATION (EU) 2023/826.

• Off: N/A

• Standby (when all wireless connections are deactivated): < 0.5 W

• Networked standby for Soundbar: < 2.0 W

*The duration for the device to enter standby mode can be set in the app. Changing this setting may lead to a significant increase in energy consumption, negatively impacting the environment.

2. The period of time after which the power management function switches the equipment automatically into:

Off	N/A	
Standby	When the soundbar is idle (with no playback or operation) and neither Bluetooth® nor the app is connected.	Switched to standby mode after 15 minutes.
Networked standby	When Bluetooth® or the app is connected.	Switched to networked standby mode after 15 minutes of inactivity in operational mode.

3. If this equipment has the wireless network connections:

How to activate wireless network connections:

• Set up the equipment properly;

• Switch into wireless mode (Bluetooth®);

• Connect with energy using products (e.g. players/ game

consoles/ STB (Set-Top Boxes)/ phones/ tablets/ PCs). How to

deactivate wireless network connections: • Switch to another

channel besides Bluetooth®;

• Then long press  on the remote control for more than 3 seconds.

For other languages of the above content (DE, FR, ES, IT, PT, NL, PL, SV, TR, JP, CN, TC, KO, ID, TH, AR), please scan the QR code



IMPORTANT SAFETY INSTRUCTIONS (English):

1. Please read and retain this manual. Follow all warnings and operate according to the instructions.

2. Do not use the device near water sources, in damp environments, or in the rain. Avoid splashing liquids or placing objects containing liquids (such as vases) on the device.

3. Clean only with a dry cloth. Do not use liquid cleaners.

4. Do not block ventilation openings or install the device in an enclosed space. Ensure proper ventilation and install according to the manufacturer's instructions.

5. Do not install the device near heat sources such as radiators, stoves, or amplifiers. Do not cover the ventilation openings with items such as newspapers or curtains.

6. Use only attachments, stands, or accessories specified by the manufacturer. When using a device with wheels, move with care to avoid tipping.

7. Protect the power cord from being pinched, stepped on, or bent, especially at plugs, outlets, and the point where it exits the device.

8. Do not alter the polarized or grounding-type plug. If the plug does not fit into the outlet, consult an electrician to replace the outlet.

9. Unplug the device during lightning storms or when unused for long periods. To fully disconnect power, unplug the device from the wall outlet and ensure the plug is accessible.

10. Do not place any open flame sources (such as lit candles) on or near the device.

11. Do not attempt to open the device. High voltage inside may be fatal. There are no user-serviceable parts inside. All servicing must be performed by qualified personnel.

12. The installation height of the device must not exceed 2 meters.



Scan QR for safety info / QR-Code für Infos scannen / Scanner le QR pour infos / Escanee QR para info / Scansiona il QR per info / Leia o QR para info / Scan QR-code voor info / Zeskanuj kod QR / Skanna QR for info / QR kodu tara / QRコードをスキャン / 扫码查看安全信息 / 掃碼查看安全資訊 / QR 코드 스캔 / Pindai QR untuk informasi keselamatan / อ่าน QR เพื่อข้อมูลความปลอดภัย / QR کدوم را اسکن کنید

PROPER DISPOSAL INSTRUCTIONS



This mark shown on the product or its packaging, indicates that this product should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Waste Electrical & Electronic Equipment

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

WIRELESS FREQUENCY RANGE AND WIRELESS OUTPUT POWER:

Frequency: 2.402GHz-2.48GHz

The Max. transmit power (Applies only to the EU): 10 dBm

FCC REGULATORY COMPLIANCE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux

CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- 3) The device meets the exemption from the routine evaluation limits in issue6 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la numéro 6 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. Cet émetteur ne doit pas être Co-placé ou ne fonctionner en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Wireless Capability Description:

The right rear surround is equipped with a wireless signal reception module, enabling it to receive audio signals from the main device for playback. This device only supports wireless signal reception and cannot relay or forward signals. The subwoofer in the system is designed for wired connection and does not have the ability to transmit or receive wireless signals.

The remote control uses infrared (IR) technology for device control and does not support any other wireless signal transmission or reception capabilities.

⚠ CA WARNING: Can expose you to BPA, a carcinogen, and BPA, a reproductive, toxicant. See www.P65Warnings.ca.gov.

CE WARNINGS

- 1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- 2) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 3) WARNING: The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.
- 4) Frequency: 2.402GHz-2.48GHz
- 5) The Max. transmit power: 10 dBm

EU Declaration of Conformity

We (Manufacturer is responsible for this declaration)
Ultimea Technology (Shenzhen) Limited
(Company name)

20th Floor, Building 4, Tianan Cloud Park, Bantian St.,
Longgang District Shenzhen, China 518000
(Company address)

Declare under our sole responsibility that the product
Trade Mark: ULTIMEA
Product Name: Soundbar
Model No.: UC000

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020
EN 55035:2017/A1:2020
EN IEC 61000-3-2:2019/A1:2021
EN 61000-3-3:2013/A2:2021
ETSI EN 301 489-1 V2.2.3 (2019-11)
ETSI EN 301 489-17 V3.2.4 (2024-09)
ETSI EN 300 328 V2.2.2 (2019-07)
EN 50663: 2017
EN IEC 62368-1:2020+A1:2020
IEC 62321-3-1:2013
IEC 62321-4:2013+A1:2017
IEC 62321-5:2013
IEC 62321-6:2015
IEC 62321-7-1:2015
IEC 62321-7-2:2017
IEC 62321-8:2017

Full Name: Yoyo.Yu
Position: Approbation Manager
Signature: 

Place/Date: Shenzhen, China / Feb. 01-2026

 
Trade Marks:



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ultimea Technology (Shenzhen) Limited. is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

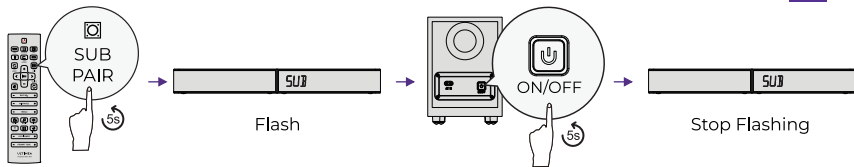

- EN** Normally, the Soundbar and Subwoofer are pre-paired. If disconnected, follow the steps below. The subwoofer indicator **will** stay solid when paired successfully.
- DE** Normalerweise sind die Soundbar und der Subwoofer vorab gekoppelt. Bei einer Trennung folgen Sie den untenstehenden Anweisungen. Die Subwoofer-Anzeige leuchtet konstant, wenn die Verbindung erfolgreich ist.
- FR** Normalement, la barre de son et le caisson de basses sont déjà appairés. En cas de déconnexion, suivez les instructions ci-dessous. Le voyant du caisson restera fixe une fois l'appairage réussi.
- ES** Normalmente, la barra de sonido y el subwoofer están emparejados previamente. Si se desconectan, siga los pasos a continuación. El indicador del subwoofer permanecerá encendido cuando se haya emparejado con éxito.
- IT** Normalmente, la soundbar e il subwoofer sono pre-accoppiati. In caso di disconnessione, seguire i passaggi seguenti. L'indicatore del subwoofer rimarrà acceso una volta completato l'abbinamento.
- PT** Normalmente, a barra de som e o subwoofer são pré-emparelhados. Caso esteja desligado, siga os passos abaixo. O indicador do subwoofer permanecerá sólido quando o emparelhamento for bem-sucedido.
- NL/BE** Normaal gesproken zijn de soundbar en subwoofer vooraf gekoppeld. Indien losgekoppeld, volg de onderstaande stappen. Het lampje op de subwoofer blijft branden wanneer het succesvol is gekoppeld.
- PL** Zazwyczaj soundbar i subwoofer są wstępnie sparowane. W przypadku rozłączenia, wykonaj poniższe kroki. Wskaźnik na subwooferze będzie stale świecić po udanym sparowaniu.
- SV** Vanligtvis är soundbaren och subwoofern förkopplade. Om de kopplas bort, följ stegen nedan. Subwooferns indikatorlampa kommer att lysa fast när den har anslutits framgångsrikt.
- TR** Normalde, Soundbar ve Subwoofer önceden eşleştirilmiştir. Ayrılma durumunda aşağıdaki adımları izleyin. Subwoofer'in göstergesi eşleştirme başarılı olduğunda sabit yanar.
- JP** 通常、サウンドバーとサブウーファーは事前にペアリングされています。切断された場合、以下の手順に従ってください。サブウーファーのインジケーターが点灯するとペアリングが成功です。
- CN** 通常情况下，Soundbar 和低音炮是预先配对的。如果断开连接，请按照以下步骤操作。配对成功后，低音炮指示灯将保持常亮。
- TC** 通常情况下，Soundbar 和 Subwoofer 是预先配对的。如果斷開連接，請依照下列步驟操作。配對成功後，重低音指示燈將保持常亮。
- KO** 일반적으로 사운드바와 서브우퍼는 사전 페어링되어 있습니다. 연결이 끊어진 경우 아래 단계를 따르세요. 성공적으로 페어링되면 서브우퍼 표시등이 계속 켜져 있습니다.
- ID** Biasanya, Soundbar dan Subwoofer sudah dipasangkan sebelumnya. Jika terputus, ikuti langkah-langkah di bawah ini. Indikator subwoofer akan tetap menyala saat berhasil dipasangkan.
- TH** ปกติแล้วซาวด์บาร์และซับวูฟเฟอร์จะจับคู่ไว้ล่วงหน้า หากหลุดการเชื่อมต่อ ให้ทำตามขั้นตอนด้านล่างนี้ ไฟแสดงสถานะของซับวูฟเฟอร์จะคงสว่างเมื่อจับคู่สำเร็จ

AR بشكل افتراضي، يتم اقتران مكبر الصوت ومضخم الصوت مسبقًا. في حالة قطع الاتصال، اتبع التعليمات التالية: سيظل ضوء المؤشر على مضخم الصوت ثابتًا عند اكتمال الاقتران بنجاح.