


REMOTE CONTROL

- 1 “”: **Power Button**
Press to power Standby.
- 2 “”: **eARC**
Press to switch to eARC channel.
- 3 “”: **LED DIMMER**
Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off the LED display.
- 4 “”: **OPT**
Press to switch to OPTICAL channel.
- 5 “”: **AUX**
Press to switch to AUX channel.
- 6 “”: **Bluetooth®**
Press to switch to Bluetooth® channel.
- 7 “”: **USB**
Press to switch to USB channel.
- 8 “”: **EQ RESET**
Press to reset all EQ settings to default.
- 9 “”: **Xupmix**
The default setting is “on,” allowing for unified control over the activation and deactivation of 6 sound effect modes.
Xupmix on: The surround channel sound will be provided by a rich multi-channel signal processed by the algorithm, offering a more immersive auditory experience.
Xupmix off: The surround channel sound will be optimized based on the left and right channel signals using an algorithm, resulting in a broader sound field effect.
- 10 “+”: **Volume Up**
- 11 “-”: **Volume Down**
- 12 “<”: **Previous**
For Bluetooth® and USB mode only: Skip to previous track.
- 13 “>”: **Next**
For Bluetooth® and USB mode only: Skip to next track.
- 14 “”: **Play / Pause**
For Bluetooth® and USB mode only.
- 15 “”: **MUTE**
- 16 “”: **DEVICE RESET**
Press and hold for 5 seconds to reset the device.
- 17 “”: **BASSMX**
Press to adjust bass level, the display will show: “B5-6”, “B5-5”, “B5-4”, “B5-3”, “B5-2”, “B5-1”, “B5 0”, “B5 1”, “B5 2”, “B5 3”, “B5 4”, “B5 5”, “B5 6”.
- 18 “**MIDRANGE**”: **MIDRANGE**
Press to adjust alto level, the display will show: “MR-6”, “MR-5”, “MR-4”, “MR-3”, “MR-2”, “MR-1”, “MR 0”, “MR 1”, “MR 2”, “MR 3”, “MR 4”, “MR 5”, “MR 6”.
- 19 “**TREBLE**”: **TREBLE**
Press to adjust treble level, the display will show: “T3-6”, “T3-5”, “T3-4”, “T3-3”, “T3-2”, “T3-1”, “T3 0”, “T3 1”, “T3 2”, “T3 3”, “T3 4”, “T3 5”, “T3 6”.
- 20 “”: **MOVIE**
Press to switch to MOVIE mode, the display will show: “*MOVI*”.
- 21 “”: **MUSIC**
Press to switch to MUSIC mode, the display will show: “*MUSC*”.
- 22 “”: **VOICE**
Press to switch to VOICE mode, the display will show: “*VOIC*”.
- 23 “”: **SPORT**
Press to switch to SPORT mode, the display will show: “*SPRT*”.
- 24 “”: **GAME**
Press to switch to GAME mode, the display will show: “*GAME*”.
- 25 “”: **NIGHT**
Press to switch to NIGHT mode, the display will show: “*NIGT*”.

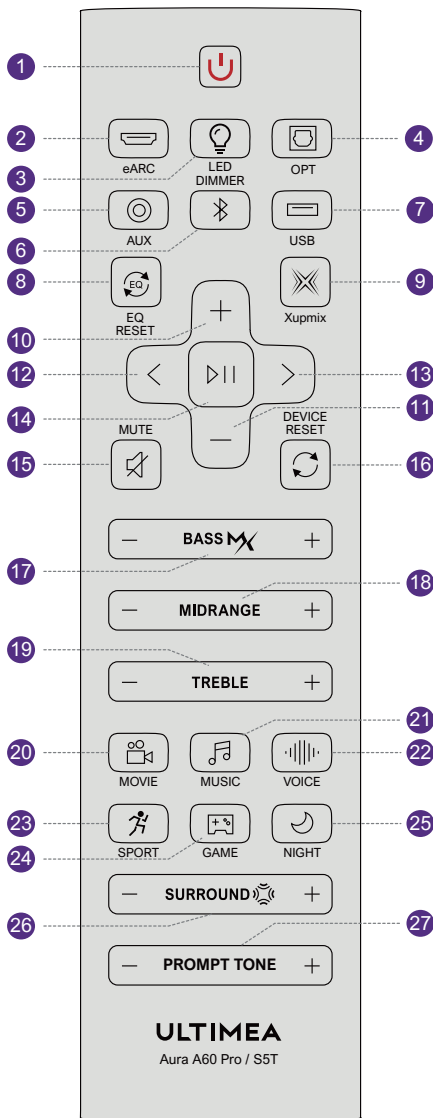

- 26 “**SURROUND**”: **SURROUND**
Press to adjust surround sound level, the display will show: “SR-6”, “SR-5”, “SR-4”, “SR-3”, “SR-2”, “SR-1”, “SR 0”, “SR 1”, “SR 2”, “SR 3”, “SR 4”, “SR 5”, “SR 6”.
- 27 “**PROMPT TONE**”: **PROMPT TONE**
Press to adjust prompt tone level, the display will show: “PT 0”, “PT 1”, “PT 2”, “PT 3”.