ULTIMEA

Dolby Atmos

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

Bluetooth®



دليل المستخدم

Poseidon D60

رقم الموديل:U2520

مكبر صوت Dolby Atmos 5.1 قناة

- 1.يرجى قراءة هذه التعليمات والاحتفاظ بها. اتبع جميع التحذيرات وشغّل الجهاز وفقاً للتعليمات.

- 2.لا تستخدم الجهاز بالقرب من الماء، أو في بيئات رطبة، أو تحت المطر. تجنب انسكاب السوائل على الجهاز أو وضع أشياء تحتوي على سوائل (مثل المزهريات) فوقه.

- 3.نظّف فقط بقطعة قماش جافة. لا تستخدم منظفات سائلة.

- 4.لا تسد فتحات التهوية ولا تثبت الجهاز في مكان ضيق. تأكد من التهوية المناسبة وقم بتركيب الجهاز وفقاً لتعليمات الشركة المصنعة.

- 5.لا تثبت الجهاز بالقرب من مصادر الحرارة مثل المشعات، المواقد، مكبرات الصوت، أو الأجهزة الأخرى التي تولد حرارة. لا تغط فتحات التهوية بأشياء مثل الصحف أو الستائر.

- 6.استخدم فقط الملحقات أو الحوامل أو الإكسسوارات المحددة من قبل الشركة المصنعة. عند استخدام معدات ذات عجلات، توخ الحذر عند النقل لمنع الانقلاب.

- 7.احم سلك الطاقة من الدوس أو الضغط أو الانحناء، خاصة عند المقابس، والمآخذ، ونقطة الخروج من الجهاز.

- 8.لا تعدل قطبية القابس أو ميزات التأريض. إذا لم يكن القابس مناسباً للمقبس، استشر كهربائياً لاستبدال المقبس.


- 9.افصل سلك الطاقة أثناء العواصف الرعدية أو عند عدم الاستخدام لفترات طويلة.


- 10.لا تضع أي مصادر لهب مكشوف، مثل الشموع المشتعلة، على الجهاز.

- 11.لا تحاول فتح الجهاز. يوجد جهد عالٍ في الداخل قد يسبب صدمة كهربائية أو الوفاة. يجب أن يتم جميع أعمال الصيانة بواسطة موظفين مؤهلين.


- 12.يجب ألا يتجاوز ارتفاع تركيب الجهاز 2 متر.

2. قائمة الملحقات

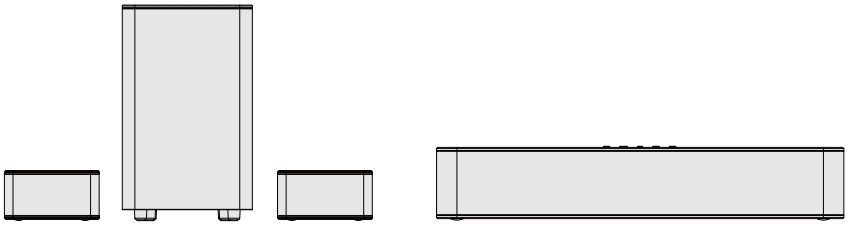


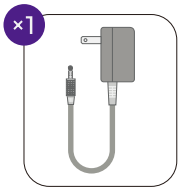


محول طاقة الساوندبار(78/2m")

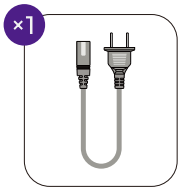


سلك طاقة مضخم الصوت(78/2m")

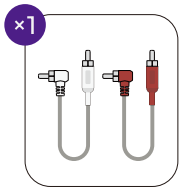

كابل توصيل الصوت المحيطي(236/6m")

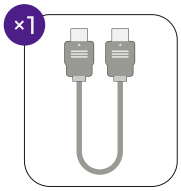


كابل HDMI(59/1.5m")

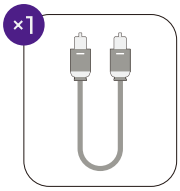


كابل بصري رقمي(59/1.5m")




جهاز التحكم عن بُعد

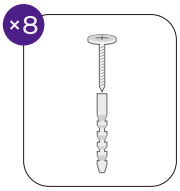

برغي الحامل

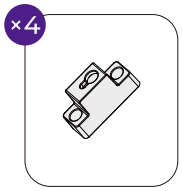


حامل تثبيت على الحائط

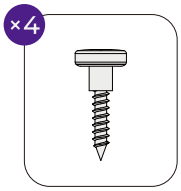


وتد توسع جداري

3. عناصر التحكم في مكبر الصوت

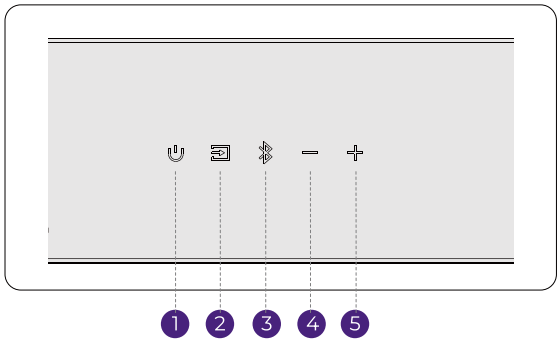

للوحة التحكم

1. "⏻" : زر التشغيل
   اضغط لتشغيل / إيقاف التشغيل
2. "⏏" : المصدر
   اضغط للتبديل: USB-AUX-Bluetooth®-OPT(OPTICAL)-eARC
3. "ᛒ" : بلوتوث
   اضغط لوضع البلوتوث، الاقتران تلقائي
   اضغط مطولاً 3 ثوانٍ لإعادة الاقتران (ID: Poseidon D60)
4. "−" : خفض الصوت
5. "+" : رفع الصوت

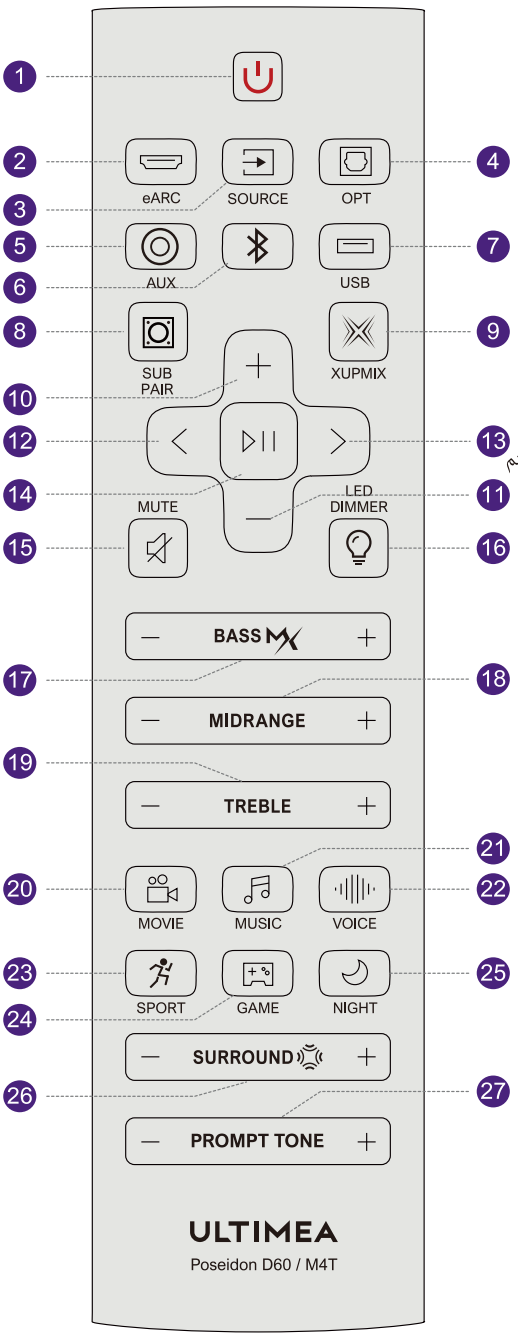

1 " ⏻ " :زر التشغيل
اضغط لتشغيل / إيقاف التشغيل

2 "eARC :"
اضغط للتبديل إلى قناة HDMI eARC

3 "SOURCE:"
اضغط للتبديل بين مصادر الإدخال.

4 "OPT :"
اضغط للتبديل إلى القناة الضوئية OPTICAL

5 "AUX :"
اضغط للتبديل إلى قناة AUX

6 "Bluetooth® :"
اضغط للتبديل إلى البلوتوث

7 "USB :"
اضغط للتبديل إلى قناة USB

8 "SUB PAIR :"
اضغط مع الاستمرار على الزر لمدة 3 ثوانٍ لوضع soundbar في حالة استعداد للاقتران بمضخم الصوت (السب ووفر)

9 "Xupmix :"
الإعداد الافتراضي هو "تشغيل"، مما يسمح بالتحكم الموحد في تنشيط وإلغاء تنشيط أوضاع التأثيرات الصوتية الستة.
Xupmix on: سيتم توفير صوت قناة الصوت المحيطي بواسطة إشارة متعددة القنوات غنية تتم معالجتها بواسطة الخوارزمية، مما يوفر تجربة سمعية أكثر غامرة.
Xupmix off: سيتم تحسين صوت قناة الصوت المحيطي استنادًا إلى إشارات القنوات اليسرى واليمنى باستخدام خوارزمية، مما يؤدي إلى تأثير مجال صوتي أوسع.

10 " + " : رفع الصوت

11 " _ " : خفض الصوت

12 " < " : السابق
فقط Bluetooth® وUSB: المقطع السابق

13 " > " : التالي
فقط Bluetooth® وUSB: المقطع التالي

14 "⏯" : تشغيل / إيقاف مؤقت
فقط Bluetooth® وUSB

15 "MUTE :"
كتم الصوت. اضغط مع الاستمرار لمدة 5 ثوانٍ لإعادة الضبط.

16 "LED DIMMER :"
اضغط لضبط سطوع الشاشة في 5 مستويات. اضغط مع الاستمرار لمدة 3 ثوانٍ لإيقاف تشغيل الشاشة

17 "BASSMX :"
اضغط لضبط مستوى الصوت الجهير

18 "MIDRANGE :"
اضغط لضبط مستوى الترددات المتوسطة

19 "TREBLE :"
اضغط لضبط مستوى الترددات العالية

20 "MOVIE:"
اضغط للتبديل إلى وضع الفيلم، ستعرض الشاشة: " E91 "

21 "MUSIC:"
اضغط للتبديل إلى وضع الموسيقى، ستعرض الشاشة: " E92 "

22 "VOICE:"
اضغط للتبديل إلى وضع الصوت، ستعرض الشاشة: " E93 "

23 "SPORT:"
اضغط للتبديل إلى وضع الرياضة، ستعرض الشاشة: " E94 "


24 "GAME:"
اضغط للتبديل إلى وضع الألعاب، ستعرض الشاشة: " E95 "

25 "NIGHT:"
اضغط للتبديل إلى الوضع الليلي، ستعرض الشاشة: " E96 "

26 "SURROUND :"
اضغط لضبط مستوى الصوت المحيطي

27 "PROMPT TONE :"
اضغط لضبط مستوى نغمة التنبيه، وستظهر الشاشة: "Pt 0"، "Pt 1"، "Pt 2"، "Pt 3"

5. منافذ التوصيل في اللوحة الخلفية

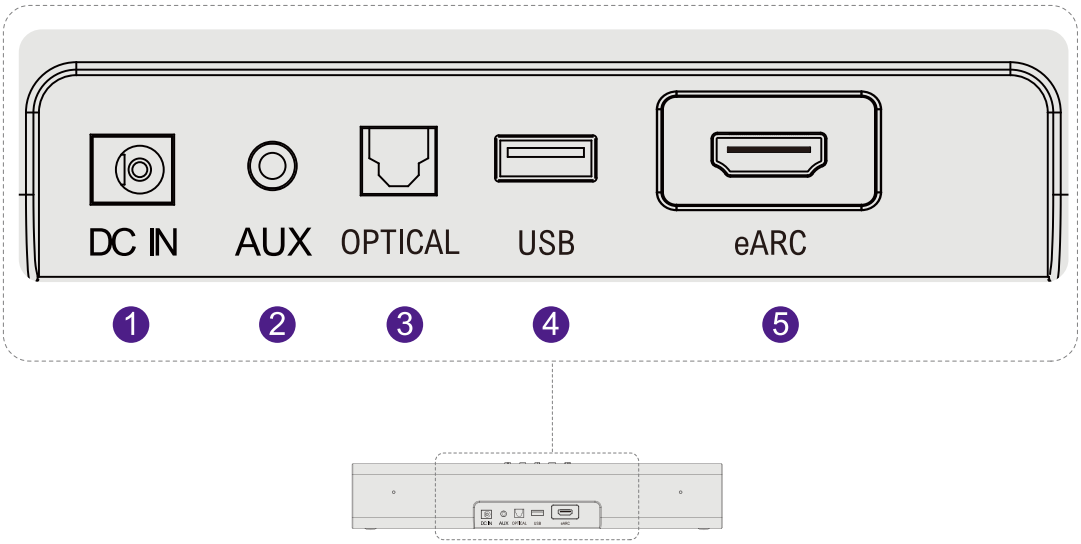

1 **DC IN**


2 **AUX**


3 **OPTICAL**

4 **USB (** يدعم MP3 أو FLAC **)**

5 **HDMI TO TV(EARC)**


6. موضع النظام

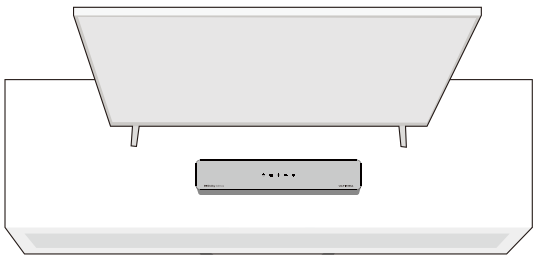

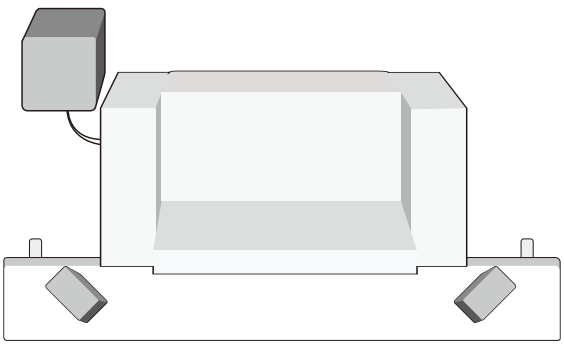

ملاحظة: ضع مكبر الصوت بمستوى الأذن


7. التثبيت على الحائط

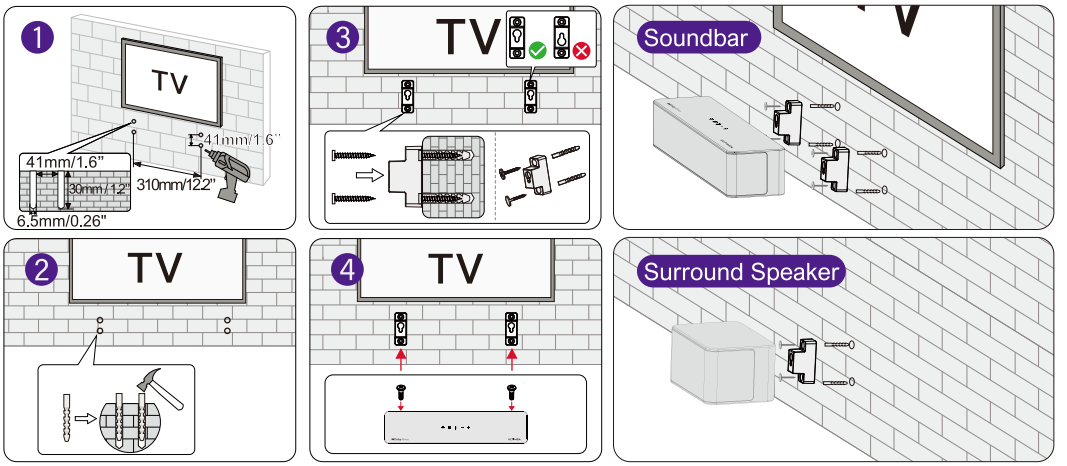


ملاحظة: حامل التثبيت على الحائط المستخدم لمكبرات الصوت المحيطية مطابق لذلك المستخدم لمكبر الصوت الرئيسي، وبالتالي فإن التباعد الرأسي للثقوب هو نفسه الموجود في soundbar، وطريقة التثبيت هي نفسها أيضًا

8. التوصيل والتشغيل

1 وصّل شريط الصوت بمصدر الطاقة.

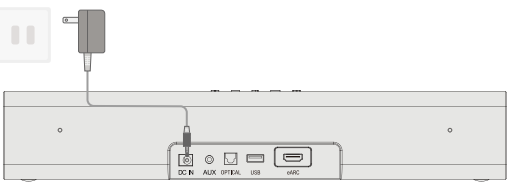


2 وصّل مضخم الصوت بمصدر الطاقة.

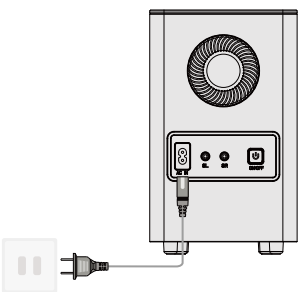


3 قم بتوصيل مضخم الصوت (السب ووفر) ومكبرات الصوت المحيطية باستخدام كابل مكبر الصوت المحيطي

مكبرات الصوت المحيطية الفرعية على الجانب الأيمن سيكون لها واجهات حمراء، بينما مكبرات الصوت المحيطية الفرعية على الجانب الأيسر سيكون لها واجهات بيضاء

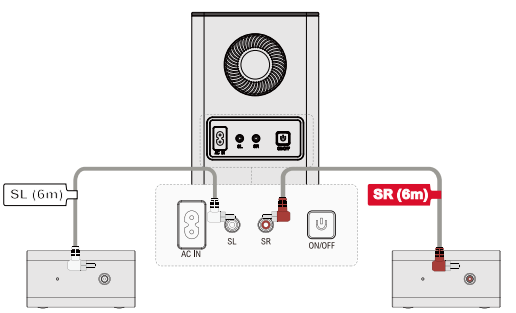


4 أدخل البطاريات

ملاحظة: يوصى ببطاريات قلوية
لا يُنصح بالبطاريات القابلة للشحن

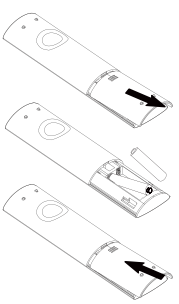


1 وصّل أحد طرفَي كابل HDMI بمنفذ eARC / ARC الموجود في الجزء الخلفي من التلفزيون

2 ثم وصّل الطرف الآخر بمنفذ eARC في مكبر الصوت الشريطي

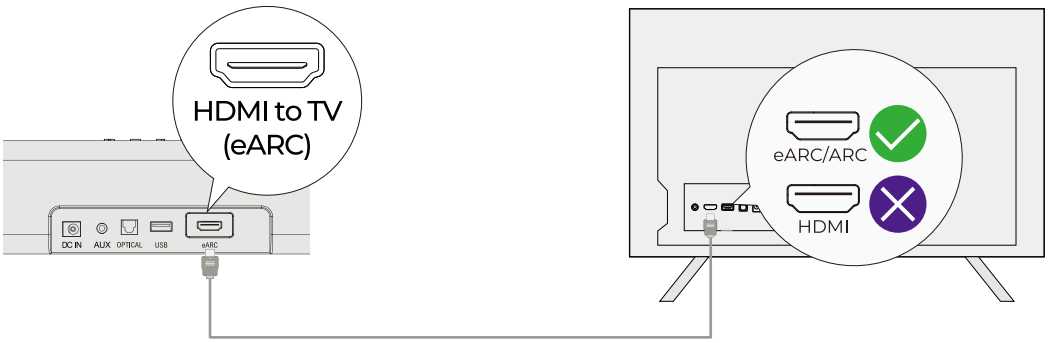

3 اضغط على زر "Source" الموجود على مكبر الصوت الشريطي أو جهاز التحكم عن بُعد لاختيار مدخل "eARC"

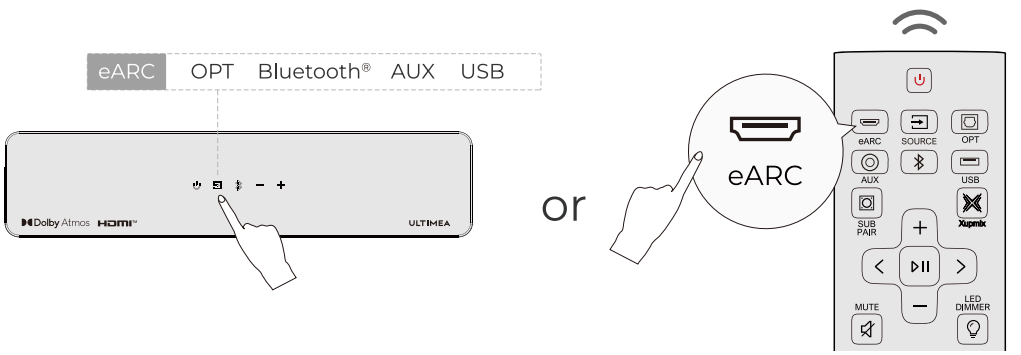

ملاحظة: تأكد من أن منفذ HDMI في تلفزيونك يدعم eARC؛ وإلا، لا يمكن نقل إشارة الصوت Dolby Atmos.

Dolby Atmos : إذا كنت تشاهد محتوى بتنسيق Dolby Atmos، فاضبط مخرج الصوت في تلفزيونك على «Pass Through».
إعدادات التلفزيون > الصفحة الرئيسية > الإعدادات > الصوت > مخرج الصوت الرقمي > Pass Through


HDMI eARC (Enhanced Audio Return Channel) هو نسخة مطورة من **ARC** تدعم تنسيقات صوتية عالية الجودة مثل **Dolby Atmos**.

ملاحظة: قم بتمكين وظيفة "CEC" على تلفزيونك. عند توصيل eARC، يمكن لجهاز التحكم عن بعد الخاص بالتلفزيون التحكم في كل من :

(١)تشغيل / وضع الاستعداد


(٢)ضبط مستوى الصوت

1 تأكد من أن التلفزيون مزود بمنفذ OPTICAL OUT. استخدم كابلًا بصريًا لتوصيل منفذ OPTICAL OUT في التلفزيون بمنفذ OPTICAL IN في شريط الصوت.

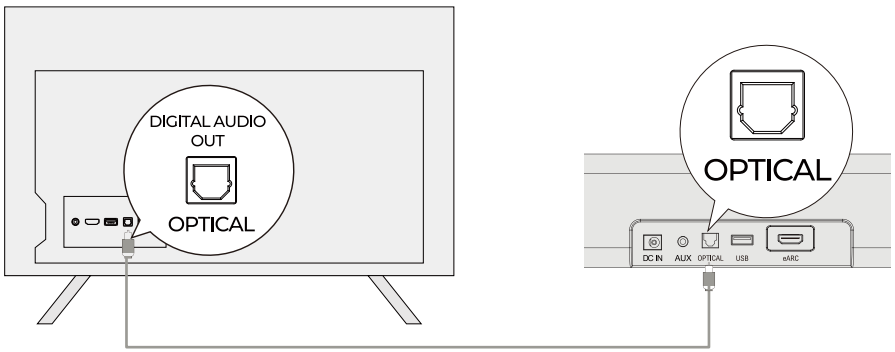

2 تأكد من إدخال موصل الكابل البصري بشكل صحيح كما هو موضح في الصورة. لا تُدخل الموصل بشكل مقلوب، فقد يؤدي ذلك إلى تلف المنفذ البصري.


3 إعدادات TV > Home > Sound > Digital Audio Output > PCM

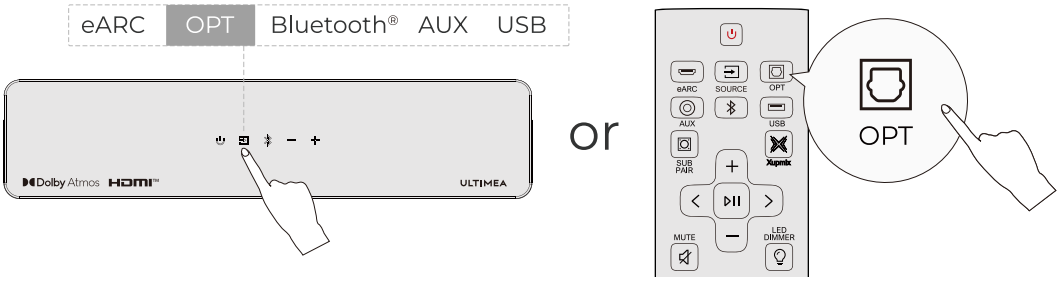

ملاحظة: إذا كان الصوت يُشغل عبر مكبرات الصوت الداخلية للتلفزيون، فقم بكتم صوت التلفزيون أو خفض مستوى الصوت إلى الحد الأدنى.


المنفذ البصري لا يدعم Dolby Atmos. للحصول على أفضل تجربة Dolby Atmos، استخدم HDMI eARC.

11. الاتصال عبر BLUETOOTH

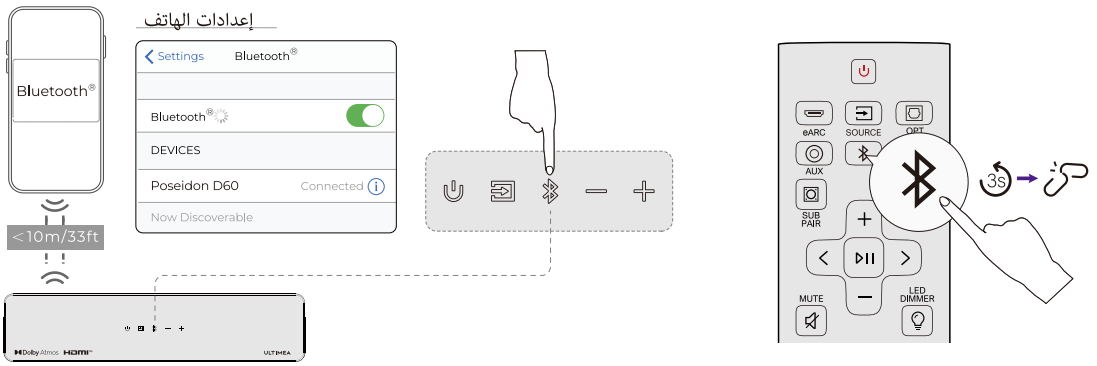

1. اضغط زر " " على مكبر الصوت أو جهاز التحكم للدخول إلى وضع اقتران Bluetooth®
2. انتقل إلى إعدادات Bluetooth® على هاتفك، وابحث عن "Poseidon D60" وحدده للاتصال بشريط الصوت.
3. ملاحظة: إذا كان شريط الصوت في وضع Bluetooth® ومتصلًا بالفعل بجهاز، فاضغط مطولًا على الزر " " لمدة 3 ثوانٍ لفصل الجهاز المتصل حاليًا. بعد ذلك، حدد شريط الصوت يدويًا على هاتفك أو الكمبيوتر أو التلفزيون لإنشاء اتصال Bluetooth® جديد.


12. إعادة إقران مضخم الصوت

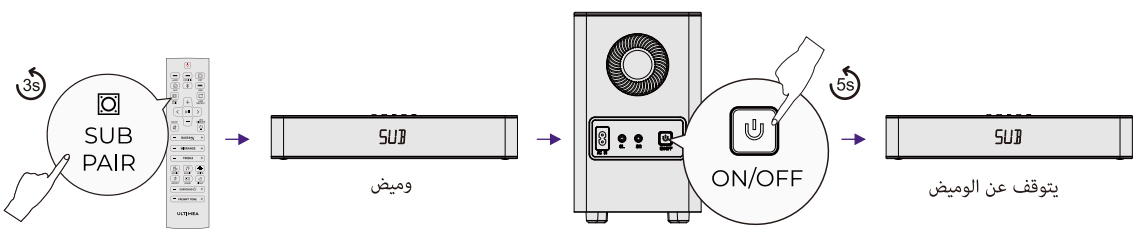

عادةً ما تكون السماعة ومضخم الصوت مقترنتين مسبقًا
إذا انقطع الاتصال، اتبع الخطوات التالية

1. اضغط مع الاستمرار على زر "SUB PAIR" لمدة 3 ثوانٍ
ستومض الشاشة " SUB " للدلالة على وضع الاقتران
2. اضغط مع الاستمرار على زر الاقتران خلف مضخم الصوت لمدة 5 ثوانٍ
3. عند نجاح الاقتران سيتوقف الوميض ويبقى ضوء المؤشر ثابتًا

13. استعادة إعدادات المصنع

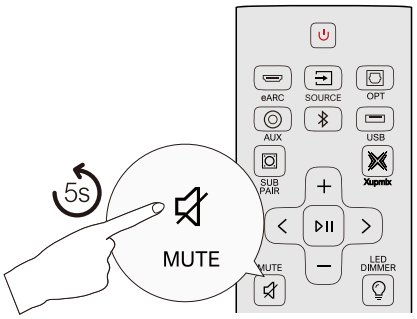

اضغط مع الاستمرار على زر MUTE لمدة 5 ثوانٍ لاستعادة إعدادات المصنع


14. ضبط مستوى صوت التنبيه


Download Ultimea App

Available on the App Store

GET IT ON Google Play

ULTIMEA

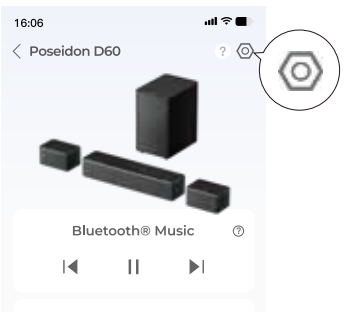

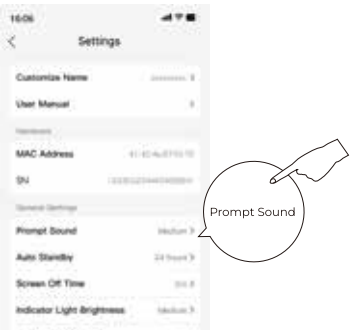

إذا كان صوت التنبيه مرتفعًا جدًا، يمكنك ضبطه عبر تطبيق **ULTIMEA**

1. امسح رمز QR لتنزيل تطبيق **ULTIMEA**ثم أضف مكبر الصوت
2. افتح صفحة تفاصيل الجهاز، واضغط على الإعدادات، ثم اختر " Prompt Sound" لضبط المستوى

Model Number	U2520
Power Supply	DC 18V 3A (Soundbar) / AC 100~240V (Subwoofer)
Soundbar Drivers	Soundbar: 2.25" × 3, Surround: 2.25" × 2, Subwoofer: 5.25"
Auto Standby	The soundbar will turn to standby mode if there is no audio signal for 15 minutes. You can set the standby time in the App
Standby Power	<0.5W
Operating Temperature	-10°C – 40°C / 14°F – 104°F
Bluetooth® Version	5.3

Soundbar	400 x 70x 90 mm/15.7" x 2.8" x 3.5"
Subwoofer	155x244x215mm/6.1"x9.6"×8.5"
Surround	135x70x90mm/5.3"x2.8"x3.5"
Packaging	328x440x190mm/12.9"×17.3" x 7.5"
Packaging Weight	6.35 kg /14 lbs

USB Output	5V 500mA
Operating Altitude	2000 meters above sea level
Wall Mount Screw	4 × 32 mm / 0.16" × 1.26"
Bracket Screws Diameter	3 mm / 0.12"
Remote Control Battery Type	2 × AAA (NOT INCLUDED)
Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.	

PROPER DISPOSAL INSTRUCTIONS



This mark shown on the product or its packaging, indicates that this product should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

For indoor use only



This symbol indicates that the product is intended for indoor use only.

Class II equipment



This symbol indicates that the product is Class II equipment.

Waste Electrical & Electronic Equipment

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.
Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

WIRELESS FREQUENCY RANGE AND WIRELESS OUTPUT POWER:

Frequency: 2.402GHz-2.48GHz
The Max. transmit power (Applies only to the EU): 10 dBm

FCC REGULATORY COMPLIANCE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux
CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes :
1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
3) The device meets the exemption from the routine evaluation limits in issue6 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la numéro 6 de RSS 102 etla conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne surl'exposition et la conformité de rf.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.
Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ouémetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Wireless Capability Description:

The subwoofer is equipped with a wireless signal reception module, enabling it to receive audio signals from the main device for playback. This device only supports wireless signal reception and cannot relay or forward signals.
The two surround speakers in the system are designed for wired connection and do not have the ability to transmit or receive wireless signals.
The remote control uses infrared (IR) technology for device control and does not support any other wireless signal transmission or reception capabilities.

⚠ **CA WARNING:** Can expose you to BPA, a carcinogen, and BPA, a reproductive. toxicant. See www.P65Warnings.ca.gov.

CE WARNINGS

1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3) WARNING: The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.
4) Frequency: 2.402GHz-2.48GHz
5) The Max. transmit power: 10 dBm

EU Declaration of Conformity

We (Manufacturer is responsible for this declaration)
Ultimea Technology (Shenzhen) Limited
(Company name)

9th Floor, Building A, Shenzhen Industrial Software Park, Bantian Street, Longgang District, Shenzhen, China 518000
(Company address)

Declare under our sole responsibility that the product
Trade Mark: ULTIMEA
Product Name: Poseidon D60 5.1 Channel Dolby Atmos Soundbar
Model No.: U2520

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020
EN 55035:2017/A11:2020
EN IEC 61000-3-2:2019/A1:2021
EN 61000-3-3:2013/A2:2021
ETSI EN 301 489-1 V2.2.3 (2019-11)
ETSI EN 301 489-17 V3.3.1 (2024-09)
ETSI EN 300 328 V2.2.2 (2019-07)
EN 50663: 2017
EN IEC 62368-1:2020+A11:2020
IEC 62321-3-1:2013
IEC 62321-4:2013+A1:2017
IEC 62321-5:2013
IEC 62321-6:2015
IEC 62321-7-1:2015
IEC 62321-7-2:2017
IEC 62321-8:2017

Full Name: Yoyo.Yu
Position: Approbation Manager

Signature: yoyo yu

Place/Date: Shenzhen, China / Sep. 13-2024

Trade Marks:

Dolby Atmos

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by Ultimea Technology (Shenzhen) Limited. is under license. Other trademarks and trade names are those of their respective owners.

General specification (English):

Model: U2520
Sound system: 5.1 channel
Power supply: 18V 3A DC(Soundbar);
100-240V~50/60Hz AC (Subwoofer)
Drivers: 2.25"×3(Soundbar) + 2.25"×2 (Surround)
+5.25"(Subwoofer)
Standby Power: <0.5W
USB Output: 5V 500mA DC
Operating Temperature: -10°C-40°C/14°F-104°F
Operating Altitude: 2000 meters above sea level
Wall Mount Screw: 4 × 32 mm / 0.16" × 1.26"
Bracket Screws Diameter: 3 mm / 0.12"
Remote Control Battery Type: 2 x AAA (NOT INCLUDED)
Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.

Dimensions

・Soundbar dimensions (W x H x D):
400 x 70 x 90 mm / 15.7" x 2.8" x 3.5"
・Subwoofer dimensions (W x H x D):
155 x 244 x 215 mm / 6.1" x 9.6" x 8.5"
・Surround dimensions (W x H x D):
135 x 70 x 90 mm / 5.3" x 2.8" x 3.5"
・Packaging dimensions (W x H x D):
328 x 440 x 190 mm / 12.9" x 17.3" x 7.5"
・Packaging Weight: 6.35 kg / 14 lbs

Power Consumption and Wireless Connection Setup Guide

1. Information on power consumption
This equipment complies with European COMMISSION REGULATION (EU) 2023/826.
・Off: N/A
・Standby (when all wireless connections are deactivated): < 0.5 W
・Networked standby for Soundbar: < 2.0 W
*The duration for the device to enter standby mode can be set in the app. Changing this setting may lead to a significant increase in energy consumption, negatively impacting the environment.
2. The period of time after which the power management function switches the equipment automatically into:

Off	N/A	
Standby	When the soundbar is idle (with no playback or operation) and neither Bluetooth®nor the app is connected.	Switched to standby mode after 15 minutes.
Networked standby	When Bluetooth® or the app is connected.	Switched to networked standby mode after 15 minutes of inactivity in operational mode.

3. If this equipment has the wireless network connections:
How to activate wireless network connections:
・Set up the equipment properly;
・Switch into wireless mode (Bluetooth®);
・Connect with energy using products (e.g. players/ game consoles/ STB (Set-Top Boxes)/ phones/ tablets /PCs). How to deactivate wireless network connections: ・Switch to another channel besides Bluetooth®;
・Then long press on the remote control for more than 3 seconds.

For other languages of the above content
(DE, FR, ES, IT, PT, NL, PL, SV, TR, JP, CN, TC, KO, ID, TH, AR),
please scan the QR code

IMPORTANT SAFETY INSTRUCTIONS (English):

1.Please read and retain this manual. Follow all warnings and operate according to the instructions.
2.Do not use the device near water sources, in damp environments, or in the rain. Avoid splashing liquids or placing objects containing liquids (such as vases) on the device.
3.Clean only with a dry cloth. Do not use liquid cleaners.
4.Do not block ventilation openings or install the device in an enclosed space. Ensure proper ventilation and install according to the manufacturer's instructions.
5.Do not install the device near heat sources such as radiators, stoves, or amplifiers. Do not cover the ventilation openings with items such as newspapers or curtains.
6.Use only attachments, stands, or accessories specified by the manufacturer. When using a device with wheels, move with care to avoid tipping.
7.Protect the power cord from being pinched, stepped on, or bent, especially at plugs, outlets, and the point where it exits the device.
8.Do not alter the polarized or grounding-type plug. If the plug does not fit into the outlet, consult an electrician to replace the outlet.
9.Unplug the device during lightning storms or when unused for long periods. To fully disconnect power, unplug the device from the wall outlet and ensure the plug is accessible.
10.Do not place any open flame sources (such as lit candles) on or near the device.
11.Do not attempt to open the device. High voltage inside may be fatal. There are no user-serviceable parts inside. All servicing must be performed by qualified personnel.
12.The installation height of the device must not exceed 2 meters.

Scan QR for safety info / QR-Code für Infos scannen / Scanner le QR pour infos / Escanee QR para info / Scansiona il QR per info / Leia o QR para info / Scan QR-code voor info / Zeskanuj kod QR / Skanna QR för info / QR kodu tara / QRコードをスキャン / 扫码查看安全信息 / 掃碼查看安全資訊 / QR 코드 스캔 / Pindai QR untuk informasi keselamatan / สแกน QR เพื่อดูข้อมูลความปลอดภัย / امسح رمز QR لمعلومات السلامة

ULTIMEA

Product Name: Poseidon D60 5.1 Channel Dolby Atmos Soundbar
Model No.: U2520
HVIN: U2520S3

EC REP

Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany

UK REP

EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London,
United Kingdom, EC2R 8AY

© Ultimea Inc. All rights reserved, registered in the United States and other countries.
801 S. Dupont Ave., Ste G, Ontario, CA, 91761, USA

Made in China
Manufacturer: Ultimea Technology (Shenzhen) Limited
Address: 9th Floor, Building A, Shenzhen Industrial Software Park, Bantian Street, Longgang District, Shenzhen, China 518000

Manufacturer Contact Information:

+1 888-598-8875 (US)
Mon-Fri 9am-5pm (PST)

+49 89-628-25828 (EU)
Mon-Fri 9am-5pm (CET)

support@ultimea.com

support.ultimea.com

If you need our support, kindly reach out to our service team.
We are always glad to help.

Download Ultimea App

GET IT ON Google Play

Available on the App Store

ULTIMEA

Search for “ULTIMEA” on social media.

RoHS

214-240436

FR Cet appareil, ses accessoires, et cordons se recyclent — REPRISE À LA LIVRAISON ou À DÉPOSER EN MAGASIN ou À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.uefairedemesdechets.fr

Warranty Extension Plan

Regardless of where you purchased your Ultimea product,
you can easily opt for this extended warranty.
Scan to check out our extended warranty options.