ULTIMEA



Gebruikershandleiding


Poseidon M4T


Modelnummer: U2522
5.1 Dolby Atmos-soundbar

1 BELANGRIJKE VEILIGHEIDSINSTRUCTIES


- 1.Lees deze instructies zorgvuldig door en bewaar ze. Volg alle waarschuwingen op en gebruik het apparaat volgens de instructies.
- 2.Gebruik het apparaat niet in de buurt van water, in vochtige omgevingen of in de regen. Vermijd het morsen van vloeistoffen op het apparaat of het plaatsen van voorwerpen met vloeistoffen (zoals vazen) erop.
- 3.Reinig alleen met een droge doek. Gebruik geen vloeibare reinigingsmiddelen.
- 4.Blokkeer de ventilatieopeningen niet en installeer het apparaat niet in een afgesloten ruimte. Zorg voor voldoende ventilatie en installeer het apparaat volgens de instructies van de fabrikant.
- 5.Installeer het apparaat niet in de buurt van warmtebronnen zoals radiatoren, kachels, versterkers of andere apparaten die warmte produceren. Bedek de ventilatieopeningen niet met kranten of gordijnen.
- 6.Gebruik alleen accessoires, stands of bevestigingen die door de fabrikant zijn gespecificeerd. Wees voorzichtig bij het verplaatsen van apparatuur met wielen om kantelen te voorkomen.
- 7.Bescherm het netsnoer tegen betreden, beknelling of knikken, vooral bij stekkers, stopcontacten en het punt waar het uit het apparaat komt.
- 8.Wijzig de polarisatie of de aardingseigenschappen van de stekker niet. Als de stekker niet in het stopcontact past, raadpleeg dan een elektricien om het stopcontact te vervangen.
- 9.Trek de stekker uit het stopcontact tijdens onweer of bij langdurige niet-gebruik.
- 10.Plaats geen open vuurbronnen, zoals brandende kaarsen, op het apparaat.
- 11.Probeer het apparaat niet te openen. Binnenin bevindt zich hoge spanning die elektrische schokken of de dood kan veroorzaken. Alle onderhoudswerkzaamheden moeten worden uitgevoerd door gekwalificeerd personeel.
- 12. De installatiehoogte van het apparaat mag niet meer dan 2 meter bedragen.

2 ACCESSOIRELIJST

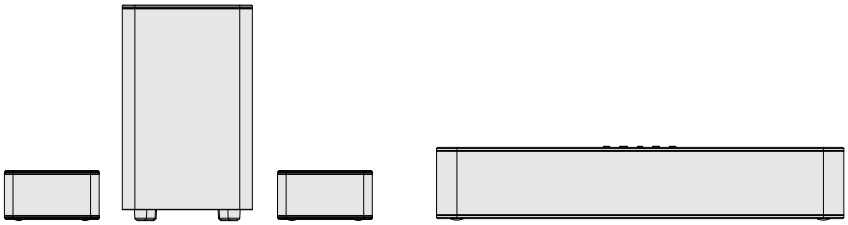


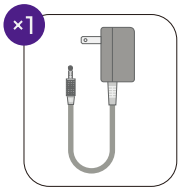


Soundbar-voedings-adapter(2m/78")

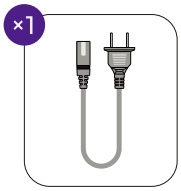


Subwoofer-voedingskabel(2m/78")

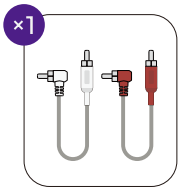

Surround-aansluitkabel (6m/236")

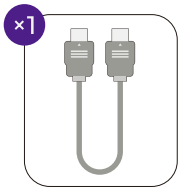


HDMI-kabel (1.5m/59")

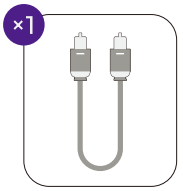


Digitale optische kabel(1.5m/59")




Afstandsbediening

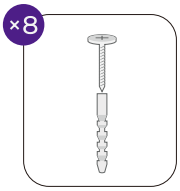

Beugelschroef

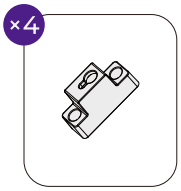


Wandbeugel

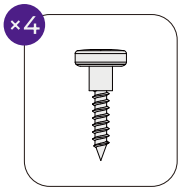

Muurplug

3 SOUNDBAR-BEDIENING

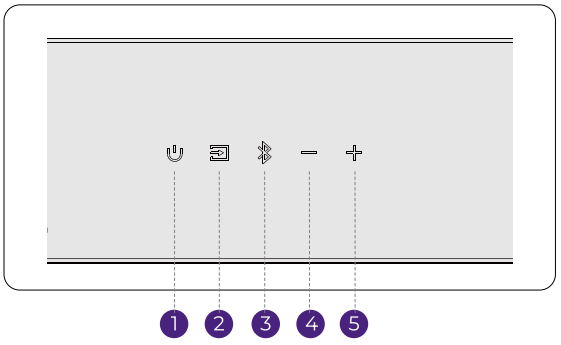

BEDIENINGSPANEEL

1. **"⏻": Aan/uit-knop**
   Druk om in- / uit te schakelen.

2. **"⏏": Bron**
   Druk om te wisselen: eARC - OPT(OPTICAL) - Bluetooth® - AUX - USB.

3. **"ᛒ": Bluetooth®**
   Druk voor Bluetooth®-modus, automatische koppeling.
   3 sec ingedrukt houden om te koppelen. (ID: Poseidon M4T)

4. **"−": Volume −**

5. **"+": Volume +**

4 AFSTANDSBEDIENING

1 “⏻” : **Aan/uit-knop**
Druk om in- / uit te schakelen.

2 “▭”: **eARC**
Druk om over te schakelen naar het HDMI eARC-kanaal.

3 “⇥”: **SOURCE**
Druk om tussen de ingangsbronnen te schakelen.

4 “▣”: **OPT**
Druk om over te schakelen naar het OPTISCHE kanaal.

5 “◎”: **AUX**
Druk om over te schakelen naar het AUX-kanaal.

6 “ᛒ”: **Bluetooth®**
Druk om naar Bluetooth® te schakelen.

7 “▭”: **USB**
Druk om over te schakelen naar het USB-kanaal.

8 “▣”: **SUB PAIR**
Houd de knop 3 seconden ingedrukt om de Soundbar in een gereedstaande toestand te brengen om te koppelen met de subwoofer.

9 “ᛞ”: **XUPMIX**
De standaardinstelling is "on", wat zorgt voor een uniforme bediening van het in- en uitschakelen van de 6 geluidseffectmodi.
Xupmix on: Het geluid van het surroundkanaal wordt geleverd door een rijk multikanaalssignaal dat door het algoritme wordt verwerkt, wat een meeslepende luisterervaring biedt.
Xupmix off: Het geluid van het surroundkanaal wordt geoptimaliseerd op basis van de linker- en rechterkanaalsignalen met behulp van een algoritme, wat resulteert in een breder geluidsveldeffect.

10 “+”: **Volume omhoog**

11 “—”: **Volume omlaag**

12 “<”: **Vorige**
Alleen BLUETOOTH® en USB: vorig nummer.

13 “>”: **Volgende**
Alleen BLUETOOTH® en USB: volgend nummer.

14 “⏯”: **Afspelen / Pauze**
Alleen BLUETOOTH® en USB.

15 “🔇”: **MUTE**
Dempen. Houd 5 seconden ingedrukt om te resetten.

16 “💡”: **LED DIMMER**
Druk om de helderheid van het display in 5 niveaus aan te passen.
Houd 3 seconden ingedrukt om het display uit te schakelen.

17 “BASS ᛞ”: **BASSMX**
Druk om bas aan te passen.

18 “MIDRANGE”: **MIDRANGE**
Druk om het niveau van de middentonen aan te passen.

19 “TREBLE”: **TREBLE**
Druk om het niveau van de hoge tonen aan te passen.

20 “🎥”: **MOVIE**
Druk om over te schakelen naar de FILM-modus, het display toont: "E91".


21 “♫”: **MUSIC**
Druk om over te schakelen naar de MUZIEK-modus, het display toont: "E92 ".

22 “🎙”: **VOICE**
Druk om over te schakelen naar de SPRAAK-modus, het display toont: "E93 ".

23 “🏃”: **SPORT**
Druk om over te schakelen naar de SPORT-modus, het display toont: " E94 ".

24 “🎮”: **GAME**
Druk om over te schakelen naar de GAME-modus, het display toont: " E95 ".


25 “☾”: **NIGHT**
Druk om over te schakelen naar de NACHT-modus, het display toont: "E96".

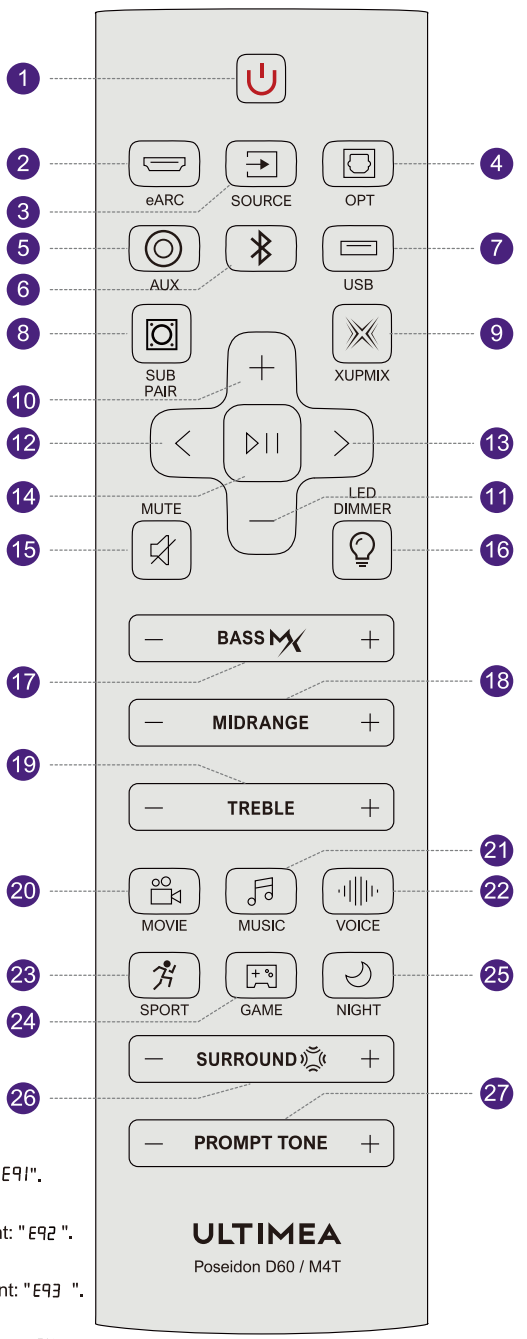

26 “SURROUND”: **SURROUND**
Druk om het surround-geluidsniveau aan te passen.


27 “PROMPT TONE”: **PROMPT TONE**
Druk om het niveau van de meldtoon aan te passen, het display toont: “Pt 0”, “Pt 1”, “Pt 2”, “Pt 3”.

5 AANSLUITINGEN OP HET ACHTERPANEEL

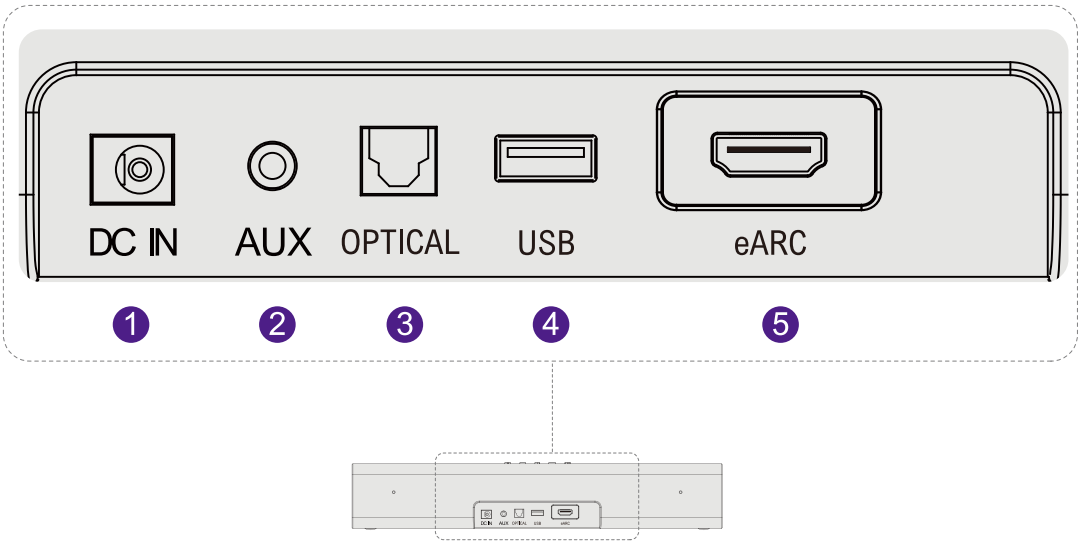


1. **DC IN**
2. **AUX**
3. **OPTICAL**
4. **USB (Ondersteunt MP3 of FLAC)**
5. **HDMI to TV(eARC)**

6 SYSTEEMPLAATSING

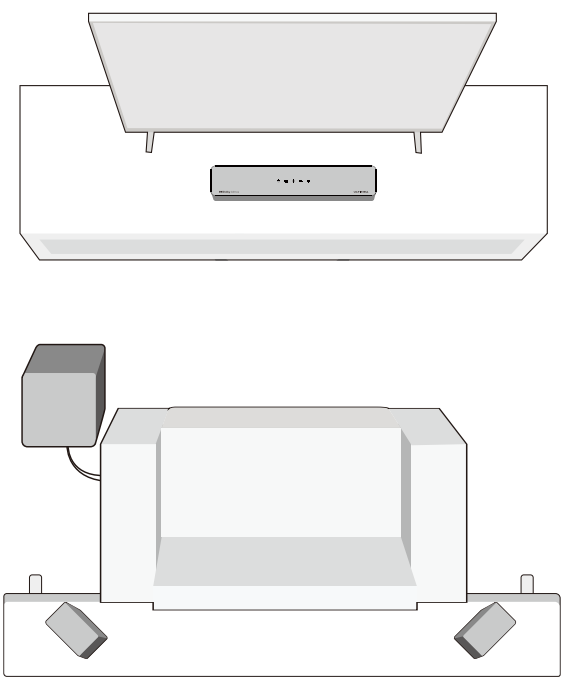

Opmerking: Plaats de soundbar op oorhoogte.


7 WANDMONTAGE

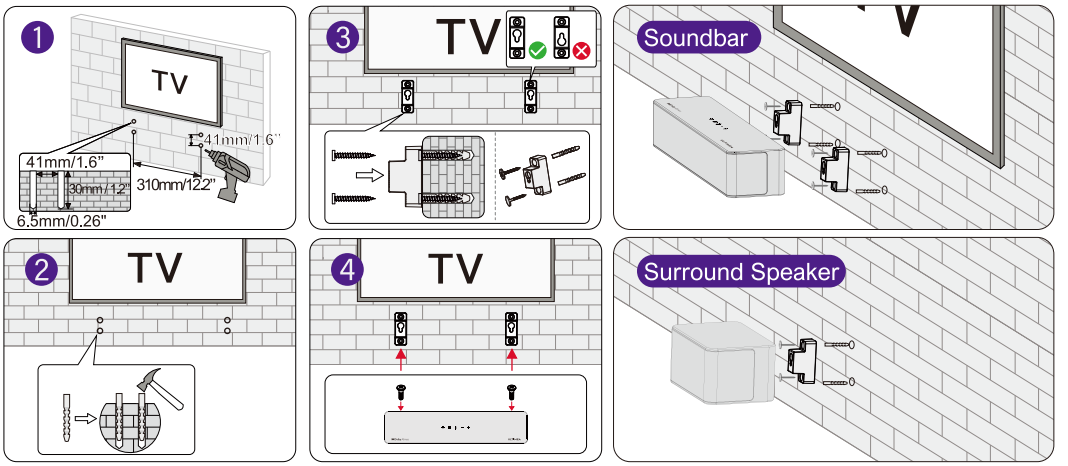


Opmerking: De wandbeugel voor de surround-luidsprekers is identiek aan die van de geluidsluidspreker, dus de verticale gatafstand is dezelfde als die van de soundbar en de installatiemethode is ook dezelfde.

8 AANSLUITEN EN INSCHAKELEN

1 Sluit de soundbar aan op de stroomvoorziening.

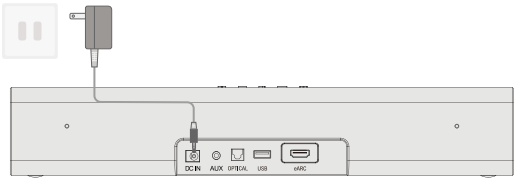


2 Sluit de subwoofer aan op de stroomvoorziening.

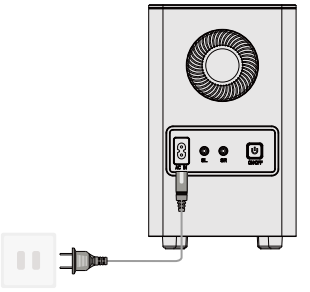


3 **Sluit de subwoofer en de surround-luidsprekers aan met behulp van de surround-luidsprekerkabel.**

De surround-satellietluidsprekers aan de rechterkant hebben rode aansluitingen, terwijl de surround-satellietluidsprekers aan de linkerkant witte aansluitingen hebben.

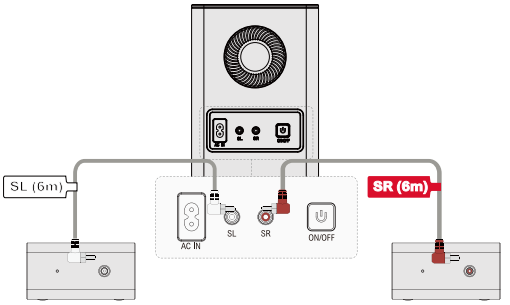

4 **Plaats batterijen in de afstandsbediening.**


Opmerking: Alkalinebatterijen aanbevolen. Oplaadbare batterijen niet aanbevolen.

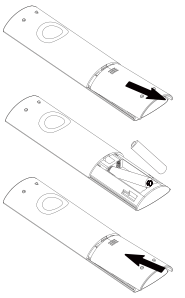


9. VERBINDEN MET TV VIA HDMI eARC

1. Sluit één uiteinde van de HDMI-kabel aan op de eARC/ARC-poort van de TV.

2. Sluit het andere uiteinde aan op de eARC-poort van de soundbar.

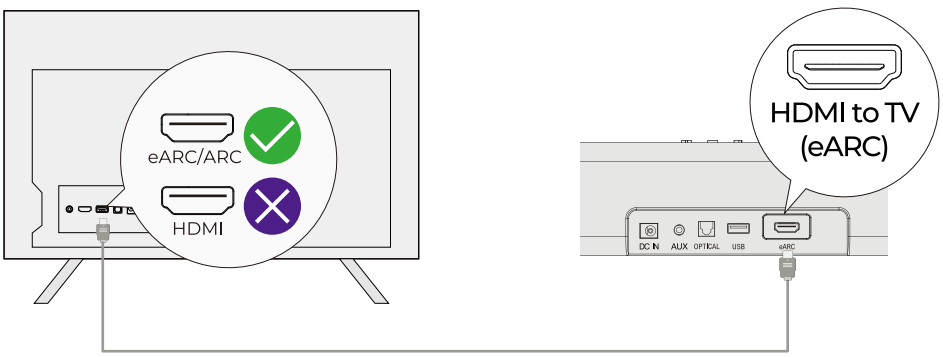

3. Druk op de "Source"-knop op de Soundbar of de afstandsbediening om de "eARC"-ingang te selecteren.

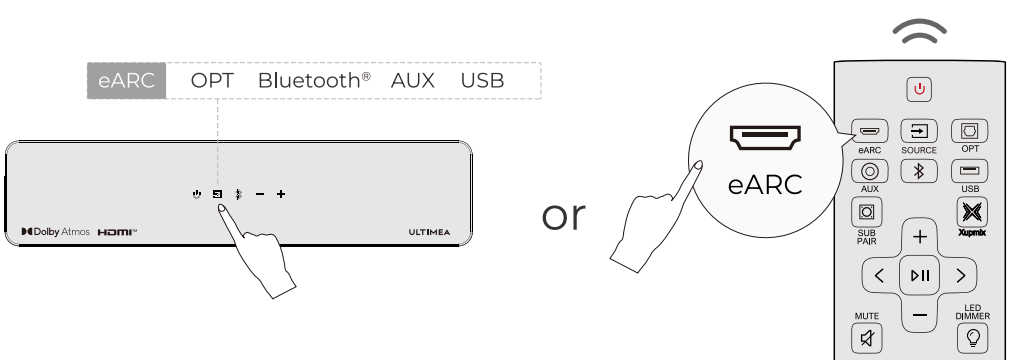

Opmerking: Zorg ervoor dat de HDMI-poort van uw tv eARC ondersteunt; anders kan het Dolby Atmos-audiosignaal niet worden verzonden.


Dolby Atmos: Als u inhoud in Dolby Atmos-formaat bekijkt, stelt u de audio-uitvoer van uw tv in op «Pass Through».
TV-instellingen > Start > Instellingen > Geluid > Digitale audio-uitvoer > Pass Through

HDMI eARC (Enhanced Audio Return Channel) is een verbeterde versie van ARC die audioformaten van hogere kwaliteit ondersteunt, zoals Dolby Atmos.

Opmerking: Schakel de “CEC”-functie op uw tv in. Wanneer eARC is aangesloten, kan uw tv-afstandsbediening zowel de Soundbar als de tv tegelijkertijd bedienen:
(1) Aanzetten / Stand-by
(2) Volume aanpassen


10. VERBINDEN MET TV VIA OPTISCHE KABEL

1. Controleer of uw tv een OPTICAL OUT-aansluiting heeft. Gebruik een optische kabel om de OPTICAL OUT-aansluiting van de tv te verbinden met de OPTICAL IN-aansluiting van de soundbar.

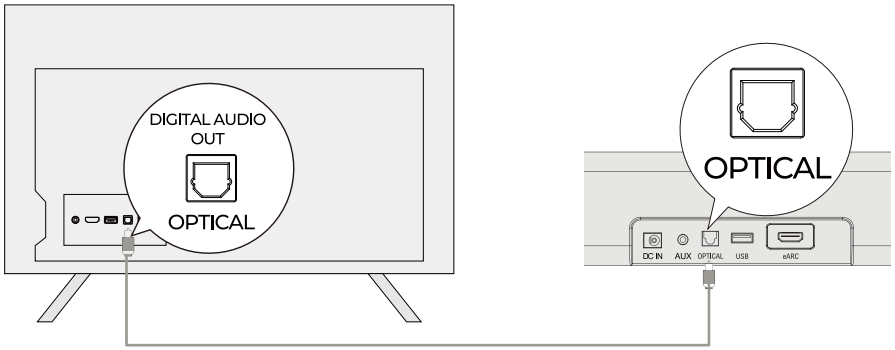


2. Zorg ervoor dat de stekker van de optische kabel correct is aangesloten, zoals weergegeven in de afbeelding. Steek de stekker niet ondersteboven in de aansluiting, omdat dit de optische poort kan beschadigen.

3. TV-instellingen > Home > Geluid > Digitale audio-uitgang > PCM

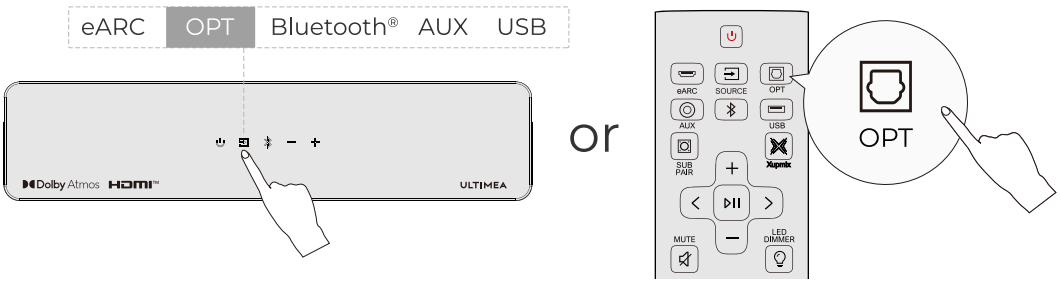


Opmerking: Als er audio wordt afgespeeld via de ingebouwde luidsprekers van de tv, demp de tv of zet het volume op het minimum.
De optische poort ondersteunt geen Dolby Atmos. Voor de beste Dolby Atmos-ervaring gebruikt u HDMI eARC.

11. VERBINDEN VIA BLUETOOTH®

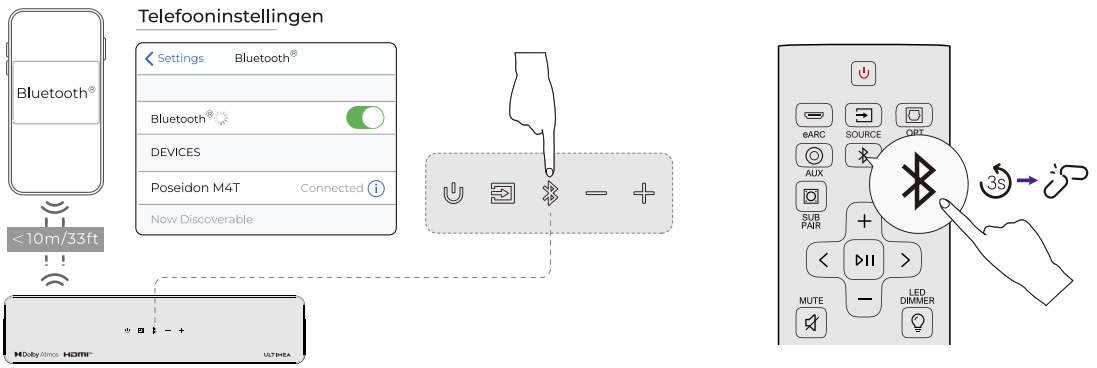

1. Druk op de knop “ ” op de soundbar of afstandsbediening om de Bluetooth® -koppelmodus te starten.
2. Open de Bluetooth®-instellingen op uw telefoon, zoek naar “Poseidon M4T” en selecteer dit apparaat om verbinding te maken met de soundbar.
3. Opmerking: Als de soundbar al in de Bluetooth®-modus staat en met een apparaat is verbonden, houdt u de knop “ ” 3 seconden ingedrukt om de huidige verbinding te verbreken. Selecteer vervolgens handmatig de soundbar op uw telefoon, pc of tv om een nieuwe Bluetooth®-verbinding tot stand te brengen.

12 SUBWOOFER OPNIEUW KOPPELEN

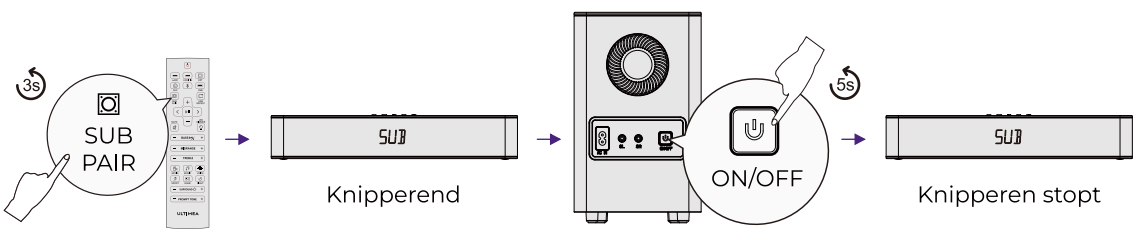


Normaal zijn soundbar en subwoofer vooraf gekoppeld.
Als de verbinding wegvalt, volg onderstaande stappen.

1. Houd de knop “SUB PAIR” 3 seconden ingedrukt.
   Het display knippert “ SUB ” om de koppelmodus aan te geven.
2. Houd de pairing-knop achterop de subwoofer 5 seconden ingedrukt.
3. Bij succesvolle koppeling stopt het knipperen en blijft het lampje branden.

13 FABRIEKSINSTELLINGEN HERSTELLEN

Houd de MUTE-knop 5 seconden ingedrukt om de fabrieksinstellingen te herstellen.

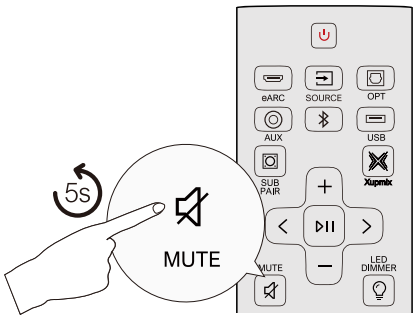


14 VOLUME VAN MELDGELUID AANPASSEN


Download Ultimea App

Available on the App Store

GET IT ON Google Play

ULTIMEA

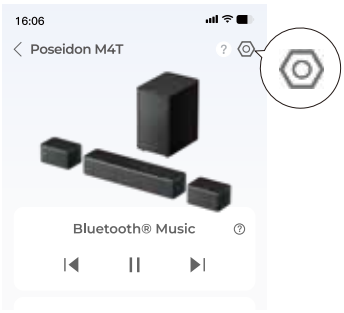

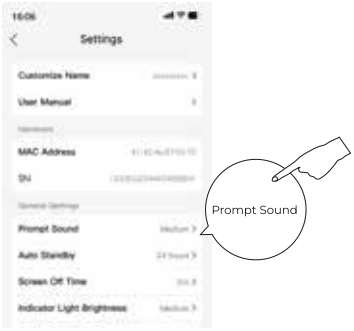

Als het meldgeluid te luid is, kunt u dit aanpassen via de ULTIMEA-app.

1. Scan de QR-code om de ULTIMEA-app te downloaden en voeg de soundbar toe.
2. Open de apparaatgegevens, tik op Instellingen en selecteer “Prompt Sound” om aan te passen.

15 TECHNISCHE SPECIFICATIES

Model Number	U2522
Power Supply	DC 18V 3A (Soundbar) / AC 100~240V (Subwoofer)
Soundbar Drivers	Soundbar: 2.25" × 3, Surround: 2.25" × 2, Subwoofer: 5.25"
Auto Standby	The soundbar will turn to standby mode if there is no audio signal for 15 minutes. You can set the standby time in the App
Standby Power	<0.5W
Operating Temperature	-10°C – 40°C / 14°F – 104°F
Bluetooth® Version	5.3

Soundbar	400 x 70x 90 mm/15.7" x 2.8" x 3.5"
Subwoofer	155x244x215mm/6.1"x9.6"×8.5"
Surround	135x70x90mm/5.3"x2.8"x3.5"
Packaging	328x440x190mm/12.9"×17.3" x 7.5"
Packaging Weight	6.35 kg /14 lbs

USB Output	5V 500mA
Operating Altitude	2000 meters above sea level
Wall Mount Screw	4 × 32 mm / 0.16" × 1.26"
Bracket Screws Diameter	3 mm / 0.12"
Remote Control Battery Type	2 × AAA (NOT INCLUDED)
Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.	

PROPER DISPOSAL INSTRUCTIONS



This mark shown on the product or its packaging, indicates that this product should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

For indoor use only



This symbol indicates that the product is intended for indoor use only.

Class II equipment



This symbol indicates that the product is Class II equipment.

Waste Electrical & Electronic Equipment

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.
Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

WIRELESS FREQUENCY RANGE AND WIRELESS OUTPUT POWER:

Frequency: 2.402GHz-2.48GHz
The Max. transmit power (Applies only to the EU): 10 dBm

FCC REGULATORY COMPLIANCE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux
CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes :
1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
3) The device meets the exemption from the routine evaluation limits in issue6 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la numéro 6 de RSS 102 etla conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne surl'exposition et la conformité de rf.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.
Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ouémetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Wireless Capability Description:

The subwoofer is equipped with a wireless signal reception module, enabling it to receive audio signals from the main device for playback. This device only supports wireless signal reception and cannot relay or forward signals.
The two surround speakers in the system are designed for wired connection and do not have the ability to transmit or receive wireless signals.
The remote control uses infrared (IR) technology for device control and does not support any other wireless signal transmission or reception capabilities.

⚠ **CA WARNING:** Can expose you to BPA, a carcinogen, and BPA, a reproductive. toxicant. See www.P65Warnings.ca.gov.

CE WARNINGS

1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3) WARNING: The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.
4) Frequency: 2.402GHz-2.48GHz
5) The Max. transmit power: 10 dBm

EU Declaration of Conformity

We (Manufacturer is responsible for this declaration)
Ultimea Technology (Shenzhen) Limited
(Company name)

9th Floor, Building A, Shenzhen Industrial Software Park, Bantian Street, Longgang District, Shenzhen, China 518000 (Company address)

Declare under our sole responsibility that the product
Trade Mark: ULTIMEA
Product Name: Poseidon M4T 5.1 Channel Dolby Atmos Soundbar
Model No.: U2522

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020

EN 55035:2017/A11:2020

EN IEC 61000-3-2:2019/A1:2021

EN 61000-3-3:2013/A2:2021

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-17 V3.3.1 (2024-09)

ETSI EN 300 328 V2.2.2 (2019-07)

EN 50663: 2017

EN IEC 62368-1:2020+A11:2020

IEC 62321-3-1:2013

IEC 62321-4:2013+A1:2017

IEC 62321-5:2013

IEC 62321-6:2015

IEC 62321-7-1:2015

IEC 62321-7-2:2017

IEC 62321-8:2017

Full Name: Yoyo.Yu
Position: Approbation Manager

Signature: yoyo yu

Place/Date: Shenzhen, China / Sep. 13-2024

Trade Marks:

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.

HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ultimea Technology (Shenzhen) Limited. is under license. Other trademarks and trade names are those of their respective owners.

General specification (English):

Model: U2522
Sound system: 5.1 channel
Power supply: 18V 3A DC(Soundbar);
100-240V~50/60Hz AC (Subwoofer)
Drivers: 2.25"×3(Soundbar) + 2.25"×2 (Surround)
+5.25"(Subwoofer)
Standby Power: <0.5W
USB Output: 5V 500mA DC
Operating Temperature: -10°C-40°C/14°F-104°F
Operating Altitude: 2000 meters above sea level
Wall Mount Screw: 4 × 32 mm / 0.16" × 1.26"
Bracket Screws Diameter: 3 mm / 0.12"
Remote Control Battery Type: 2 x AAA (NOT INCLUDED)
Notice: Risk of fire or explosion if the battery is replaced by an incorrect type.

Dimensions

・Soundbar dimensions (W x H x D):
400 x 70 x 90 mm / 15.7" x 2.8" x 3.5"
・Subwoofer dimensions (W x H x D):
155 x 244 x 215 mm / 6.1" x 9.6" x 8.5"
・Surround dimensions (W x H x D):
135 x 70 x 90 mm / 5.3" x 2.8" x 3.5"
・Packaging dimensions (W x H x D):
328 x 440 x 190 mm / 12.9" x 17.3" x 7.5"
・Packaging Weight: 6.35 kg / 14 lbs

Power Consumption and Wireless Connection Setup Guide

1. Information on power consumption
This equipment complies with European COMMISSION REGULATION (EU) 2023/826.
・Off: N/A
・Standby (when all wireless connections are deactivated): < 0.5 W
・Networked standby for Soundbar: < 2.0 W
*The duration for the device to enter standby mode can be set in the app. Changing this setting may lead to a significant increase in energy consumption, negatively impacting the environment.
2. The period of time after which the power management function switches the equipment automatically into:

Off	N/A	
Standby	When the soundbar is idle (with no playback or operation) and neither Bluetooth® nor the app is connected.	Switched to standby mode after 15 minutes.
Networked standby	When Bluetooth® or the app is connected.	Switched to networked standby mode after 15 minutes of inactivity in operational mode.

3. If this equipment has the wireless network connections:
How to activate wireless network connections:
・Set up the equipment properly;
・Switch into wireless mode (Bluetooth®);
・Connect with energy using products (e.g. players/ game consoles/ STB (Set-Top Boxes)/ phones/ tablets /PCs). How to deactivate wireless network connections: ・Switch to another channel besides Bluetooth®;
・Then long press on the remote control for more than 3 seconds.

For other languages of the above content (DE, FR, ES, IT, PT, NL, PL, SV, TR, JP, CN, TC, KO, ID, TH, AR), please scan the QR code

IMPORTANT SAFETY INSTRUCTIONS (English):

1.Please read and retain this manual. Follow all warnings and operate according to the instructions.
2.Do not use the device near water sources, in damp environments, or in the rain. Avoid splashing liquids or placing objects containing liquids (such as vases) on the device.
3.Clean only with a dry cloth. Do not use liquid cleaners.
4.Do not block ventilation openings or install the device in an enclosed space. Ensure proper ventilation and install according to the manufacturer's instructions.
5.Do not install the device near heat sources such as radiators, stoves, or amplifiers. Do not cover the ventilation openings with items such as newspapers or curtains.
6.Use only attachments, stands, or accessories specified by the manufacturer. When using a device with wheels, move with care to avoid tipping.
7.Protect the power cord from being pinched, stepped on, or bent, especially at plugs, outlets, and the point where it exits the device.
8.Do not alter the polarized or grounding-type plug. If the plug does not fit into the outlet, consult an electrician to replace the outlet.
9.Unplug the device during lightning storms or when unused for long periods. To fully disconnect power, unplug the device from the wall outlet and ensure the plug is accessible.
10.Do not place any open flame sources (such as lit candles) on or near the device.
11.Do not attempt to open the device. High voltage inside may be fatal. There are no user-serviceable parts inside. All servicing must be performed by qualified personnel.
12.The installation height of the device must not exceed 2 meters.

Scan QR for safety info / QR-Code für Infos scannen / Scanner le QR pour infos / Escanee QR para info / Scansiona il QR per info / Leia o QR para info / Scan QR-code voor info / Zeskanuj kod QR / Skanna QR för info / QR kodu tara / QRコードをスキャン / 扫码查看安全信息 / 掃碼查看安全資訊 / QR 코드 스캔 / Pindai QR untuk informasi keselamatan / สแกน QR เพื่อดูข้อมูลความปลอดภัย / امسح رمز QR لمعلومات السلامة

ULTIMEA

Product Name: Poseidon M4T 5.1 Channel Dolby Atmos Soundbar
Model No.: U2522
HVIN: U2522

EC REP

Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany

UK REP

EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London,
United Kingdom, EC2R 8AY

© Ultimea Inc. All rights reserved, registered in the United States and other countries.
801 S. Dupont Ave., Ste G, Ontario, CA, 91761, USA

Made in China
Manufacturer: Ultimea Technology (Shenzhen) Limited
Address: 9th Floor, Building A, Shenzhen Industrial Software Park, Bantian Street, Longgang District, Shenzhen, China 518000

Manufacturer Contact Information:

+1 888-598-8875 (US)
Mon-Fri 9am-5pm (PST)

+49 89-628-25828 (EU)
Mon-Fri 9am-5pm (CET)

support@ultimea.com

support.ultimea.com

If you need our support, kindly reach out to our service team.
We are always glad to help.

Download Ultimea App

GET IT ON Google Play

Available on the App Store

ULTIMEA

Search for “ULTIMEA” on social media.

RoHS

FR
Cet appareil, ses accessoires, et cordons se recyclent
REPRISE À LA LIVRAISON
OU
À DÉPOSER EN MAGASIN
OU
À DÉPOSER EN DÉCHÈTERIE
Points de collecte sur www.uefairedemesdechets.fr

Warranty Extension Plan

Regardless of where you purchased your Ultimea product, you can easily opt for this extended warranty.
Scan to check out our extended warranty options.